


# KOLO DUO

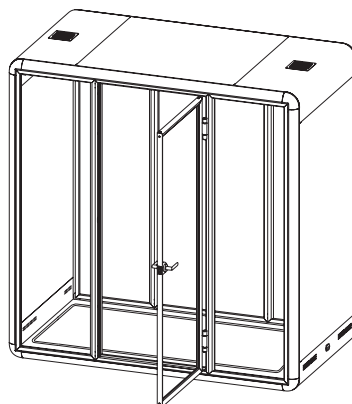

## Assembly Instructions.


---

acoustic collection - kolo duo  
[right hand open - outlet on right - without furniture - type A]

koplus b.v. | [koplus.eu](http://koplus.eu)  
[info@koplusbrand.com](mailto:info@koplusbrand.com)

version120919



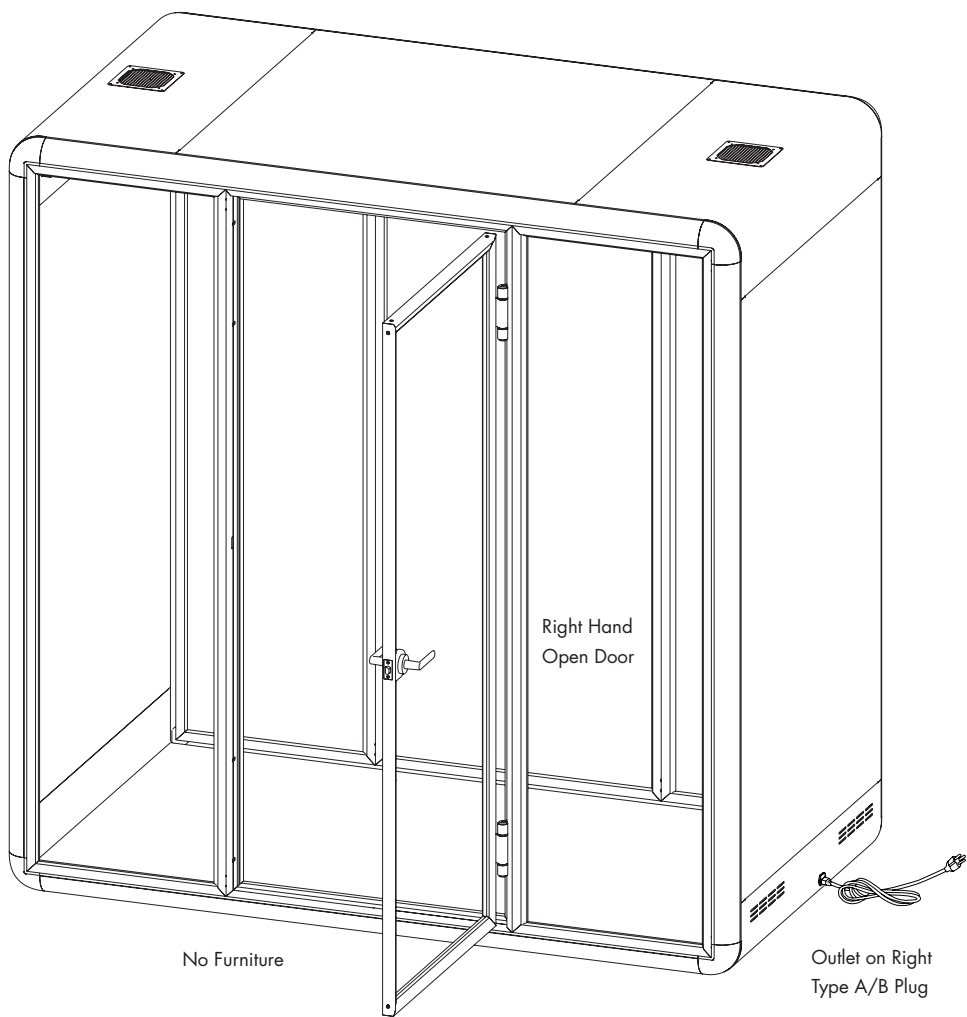

No Furniture

Right Hand  
Open Door

Outlet on Right  
Type A/B Plug

Before we start, here are some things to be aware of:

1. This is the assembly instruction for right hand opening door with no stool.
2. A packaged **Duo** unit weights 550 kg and will require 2-3 persons to install. It takes an average of 45 - 90 min to install **Duo**.
3. Please assemble with caution and make sure that the installation site is protected to prevent any injuries or risks of damaging the product and surrounding.
4. Position and assemble **Duo** as close to its final placement as possible. If needed, a fully assembled **Duo** can be lifted and moved with a pallet jack. When moving the unit, please make sure to follow the moving instruction "Kolo Moving Instruction Guide". DO NOT push the unit! You may risk tipping **Duo** or damaging its leveling feet.
5. Make sure you have all the required tools listed (pg. 03).
6. We recommend leaving atleast 30 cm of space between the wall or between multiple units of **Duo**.
7. Make sure that the **Duo** power source can safely load 10amp. When the ventilation is on, LED light is at its full lumination, and the power charging station is not in use, the wattage usage is 24W. The power cord fuse is set at 7amp to prevent overloading.
8. **Duo** comes with 2 AC power outlest and 2 charging outlets. DO NOT plug in any electronic devices that uses over 5amp.

# Required Tools



Drill

**\*\*Please confirm the adaptor specification with a Koplus sale ahead of time\*\***




90 Degree Drill Adaptor



Rubber Mallet



Ratchet Wrench - Metric Socket






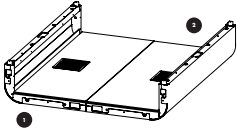








Phillips Screw Driver




Allen Key Set

Part List
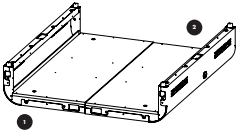
|  |  |  |
|--|--|--|
| <div>N°1-1</div> <div></div> <div>Tool Kit: Screw Packx1</div>    | <div>N°1-2</div> <div></div> <div>Tool Kit: Power Cordx1</div>    | <div>N°2-1</div> <div></div> <div>Bottom Cornersx2</div> |
| <div>N°2-2</div> <div></div> <div>Bottom Finishing Panelsx2</div> | <div>N°2-3</div> <div></div> <div>Bottom Side Tilesx2</div>       | <div>N°3-1</div> <div></div> <div>Top Cornersx2</div>    |
| <div>N°3-2</div> <div></div> <div>Top Finishing Panelsx2</div>   | <div>N°4</div> <div></div> <div>Side Wall + ElectricTilex1</div> | <div>N°5</div> <div></div> <div>Side Wallx1</div>       |
| <div>N°6-1</div> <div></div> <div>Bottomx1</div>                 | <div>N°6-2</div> <div></div> <div>Bottom Center Tilex1</div>    | <div>N°7</div> <div></div> <div>Topx1</div>            |


**N°8-1**



Horizontal Frames

x4


**N°8-2**



Horizontal Frame Covers

x4

**N°9-1**



Vertical Frames

x4


**N°9-2**



Vertical Frame Covers

x4


**N°10**



Frame Corners

x8


**N°11**

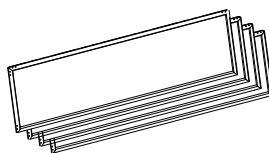

Narrow Glass Walls

x4


**N°12**

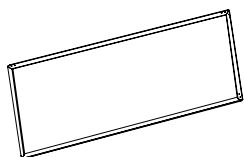

Glass Wall

x1






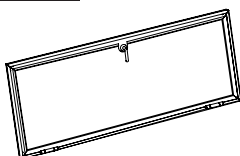**N°13**



Glass Door


x1

# Tool Kit: Screw Pack List

|   |   |   |
|---|---|---|
| <div>A</div> <div></div> <div>M8 x 35x16</div>       | <div>B</div> <div></div> <div>M8 x 50x8</div>  | <div>C</div> <div></div> <div>M8 x 25x48</div> |
| <div>D</div> <div></div> <div>Spring Washerx48</div> | <div>E</div> <div></div> <div>M4 x 25x11</div> |   |
|   |   |   |
|   |   |   |





# Step 1.

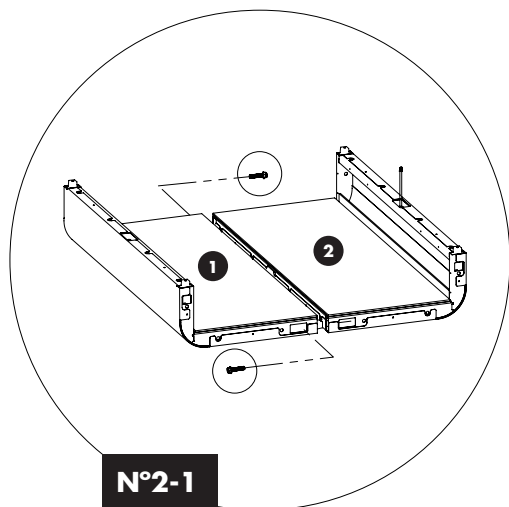


Bottom Corners

Installer Tip for Bottom Corners:  
Remove the fixing screws before  
installation. There should be two floor  
corners in carton N°2-1.

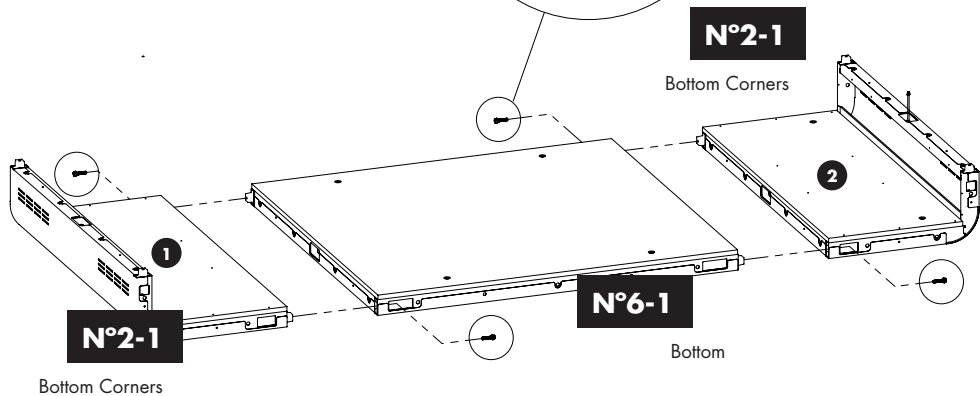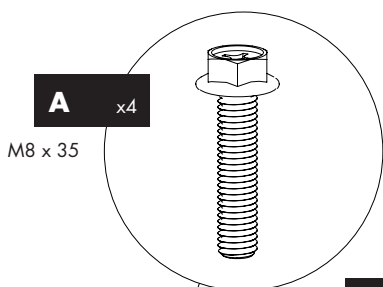

Step 2.

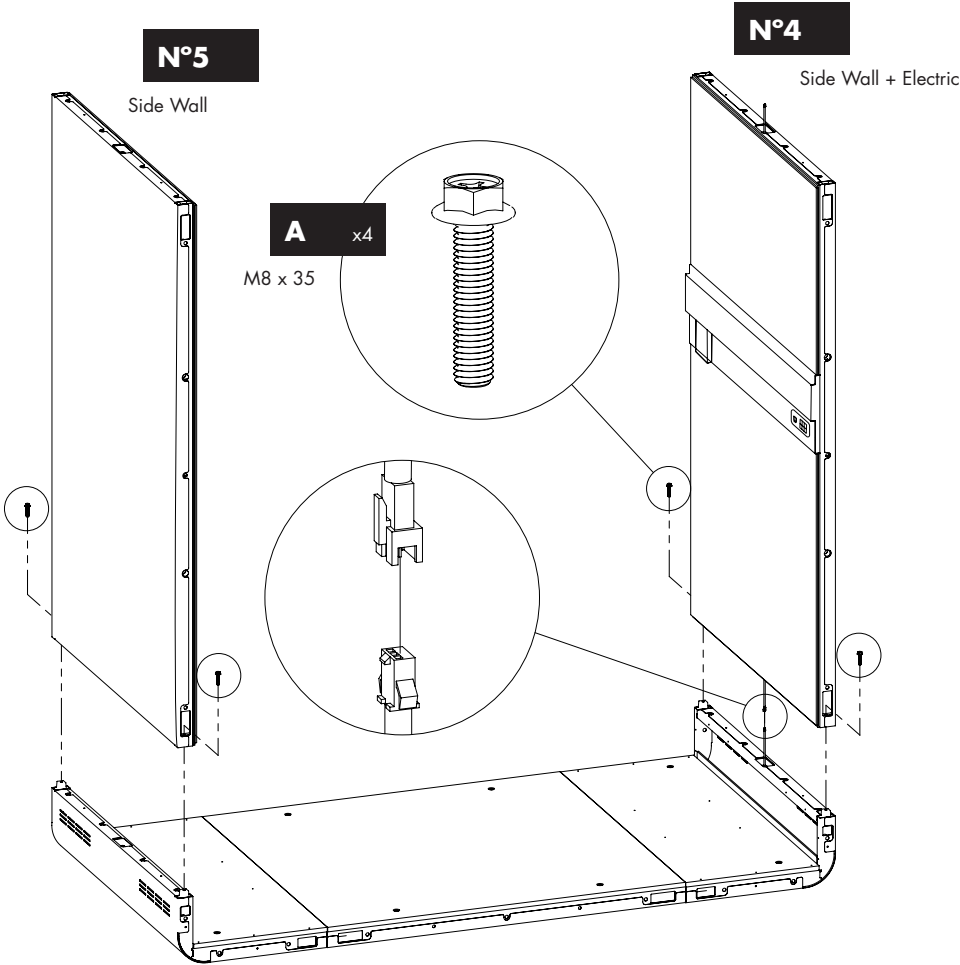


## Step 3.

Installer Tip for Top Corners:  
Remove the fixing screws before  
installation. There should be two floor  
corners in carton N°3-1.


**N°3-1**

Top Corners

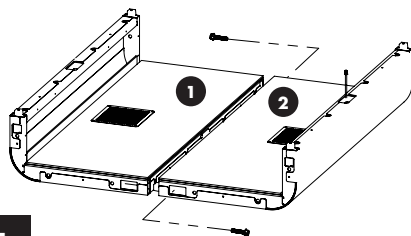


**N°3-1**

Top Corners

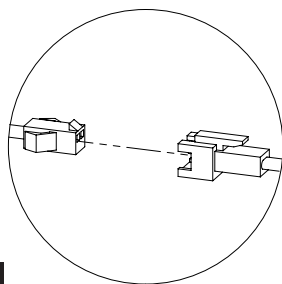


**N°7**

Top

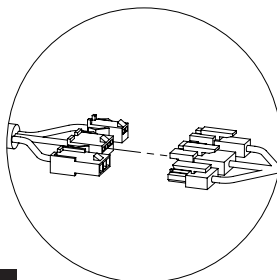


**N°3-1**


Top Corners

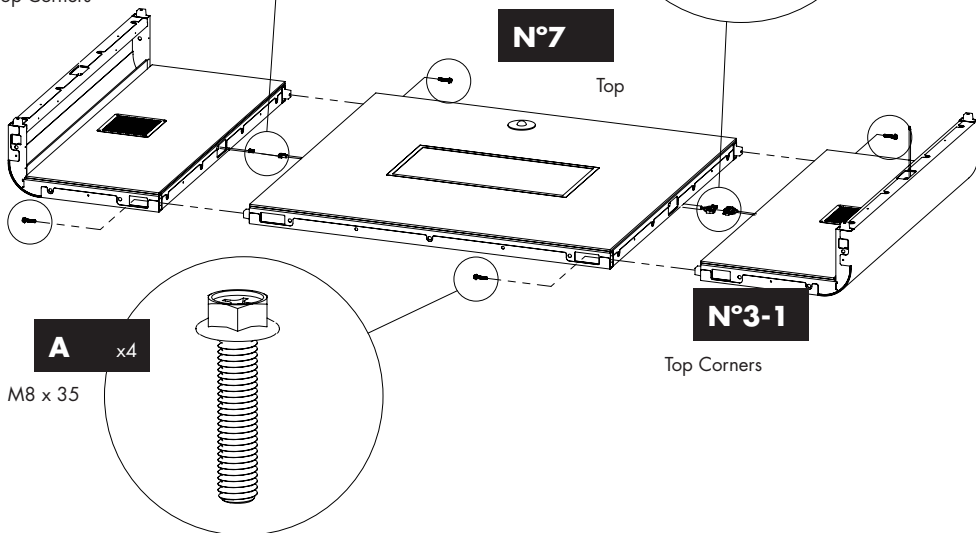

## Step 4.

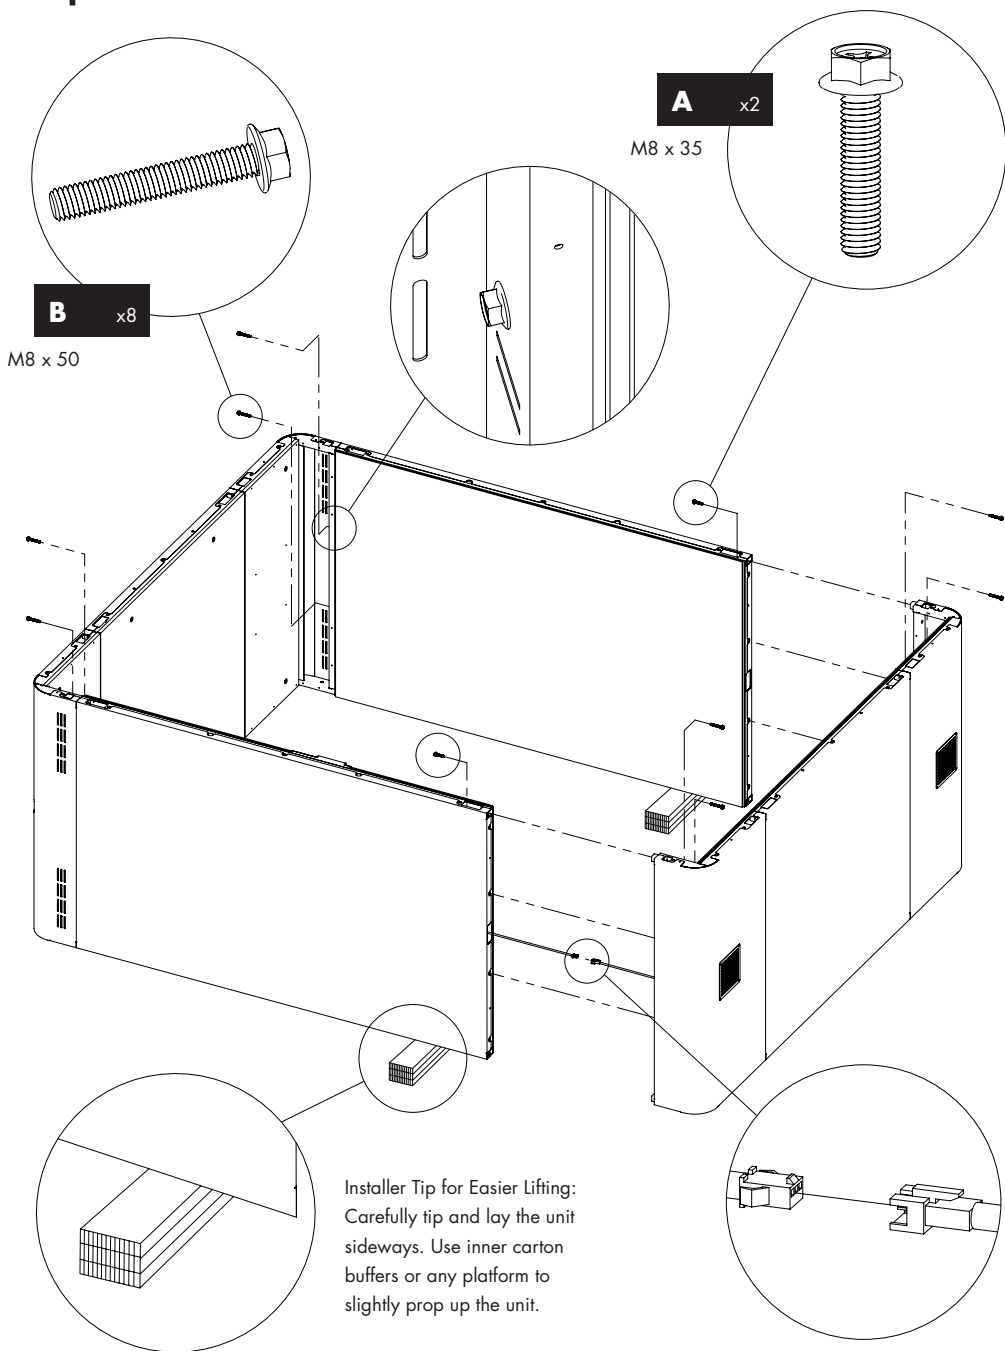


## Step 5.

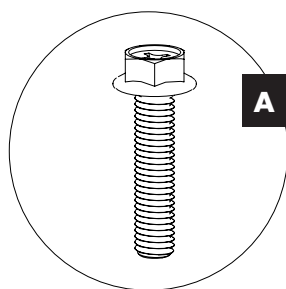

**A** x2

M8 x 35


Installer Tip for Power Connection:  
Plug in the unit and check if all electronic  
devices turn on normally. If not, check if all  
power cords are properly connected  
before proceeding.

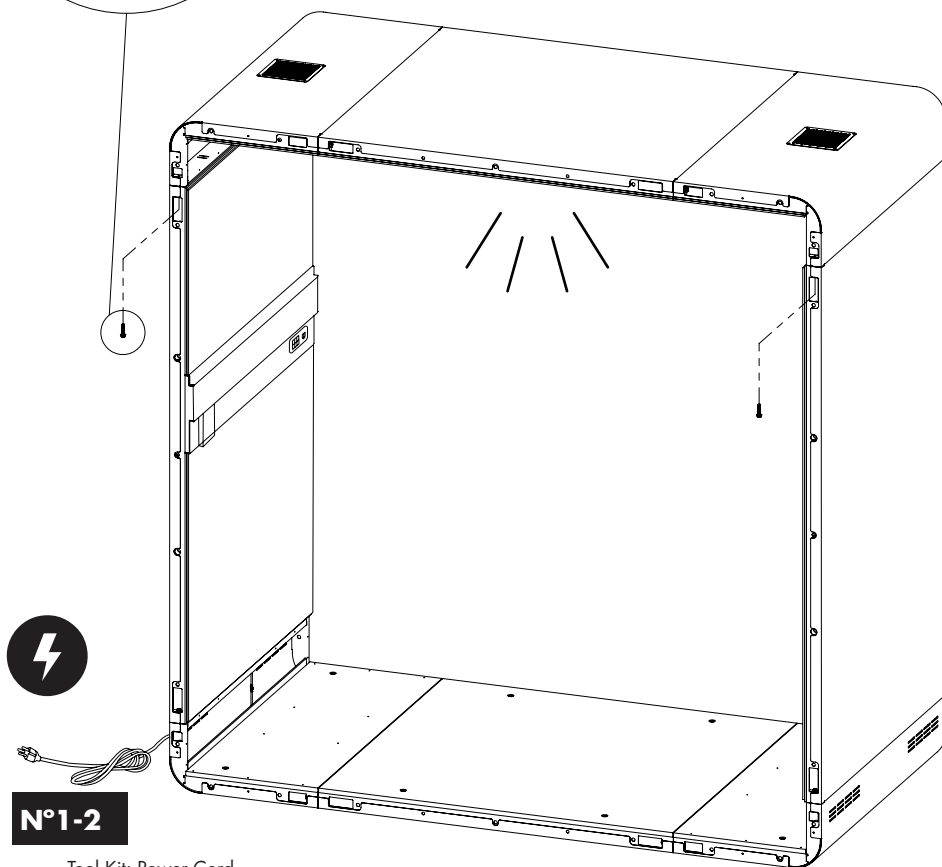


**N°1-2**

Tool Kit: Power Cord



Step 6.

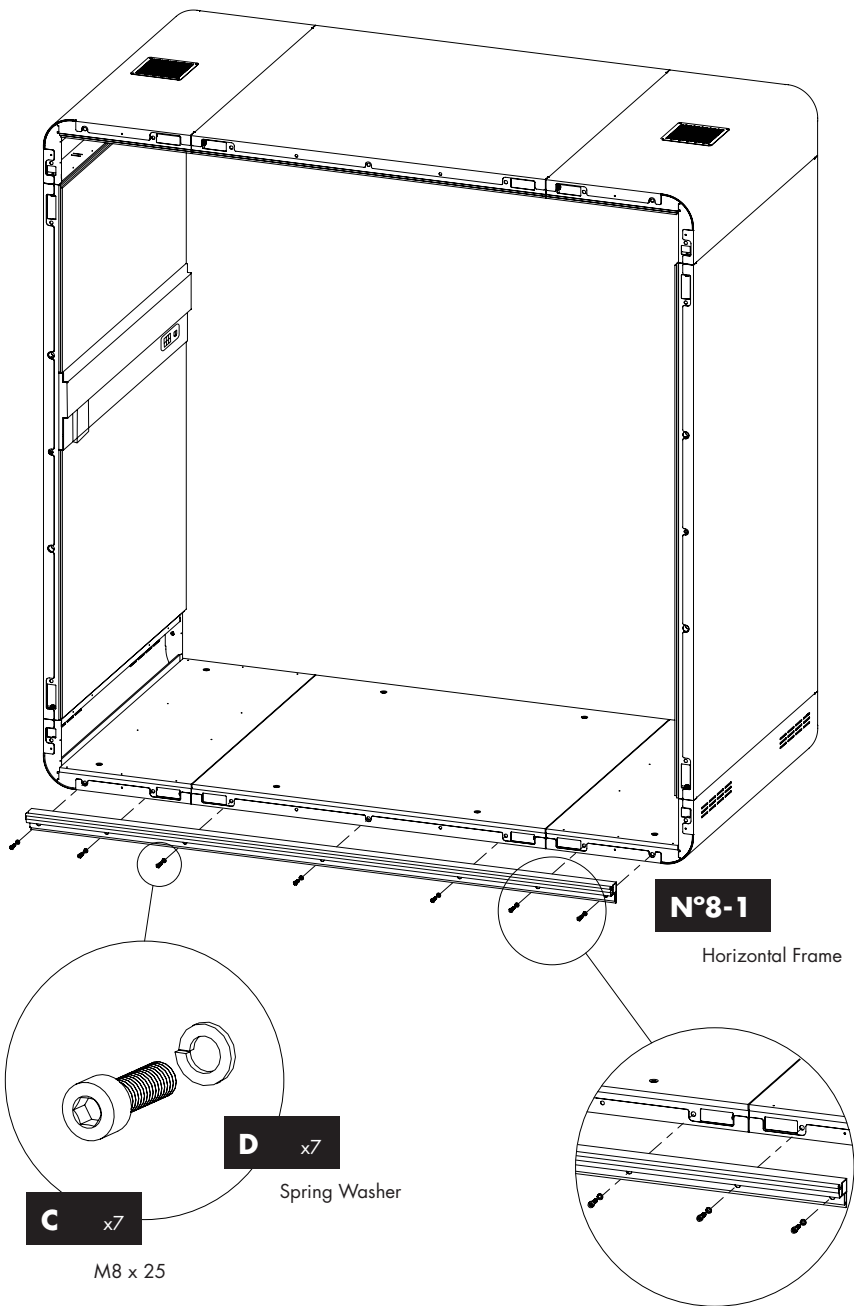


Step 7.

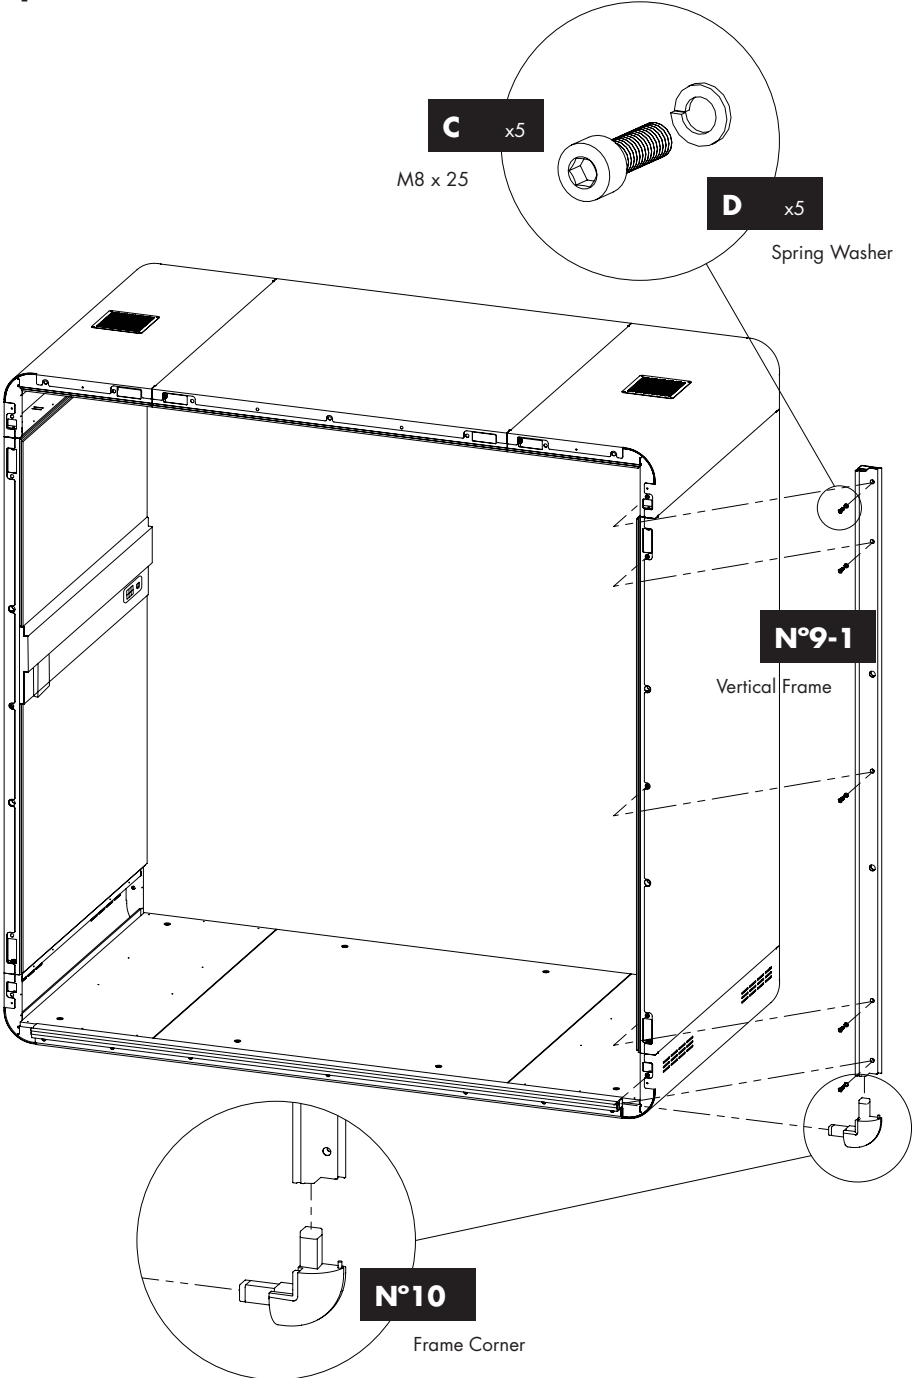

## Step 8.

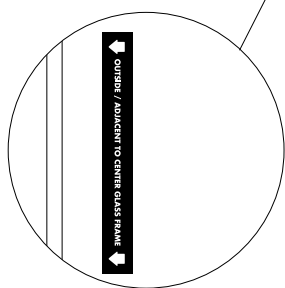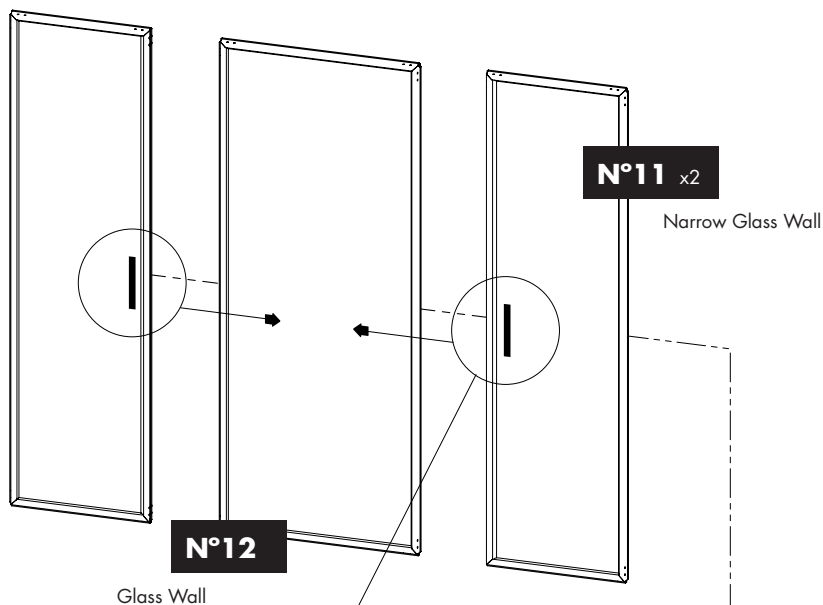

Installer Tip for Narrow Glass Wall Orientation:  
Make sure that the stickers are facing outwards  
and the arrows are pointing towards the center  
glass wall or glass door.

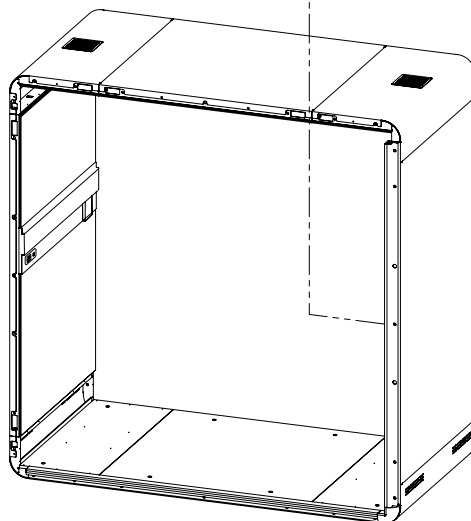




Step 9.


N°9-1

Vertical Frame




N°10

Frame Corner

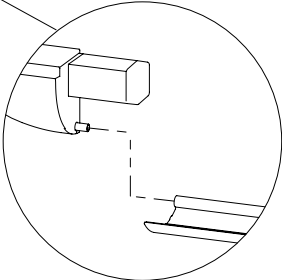


N°8-2


Horizontal Frame Cover

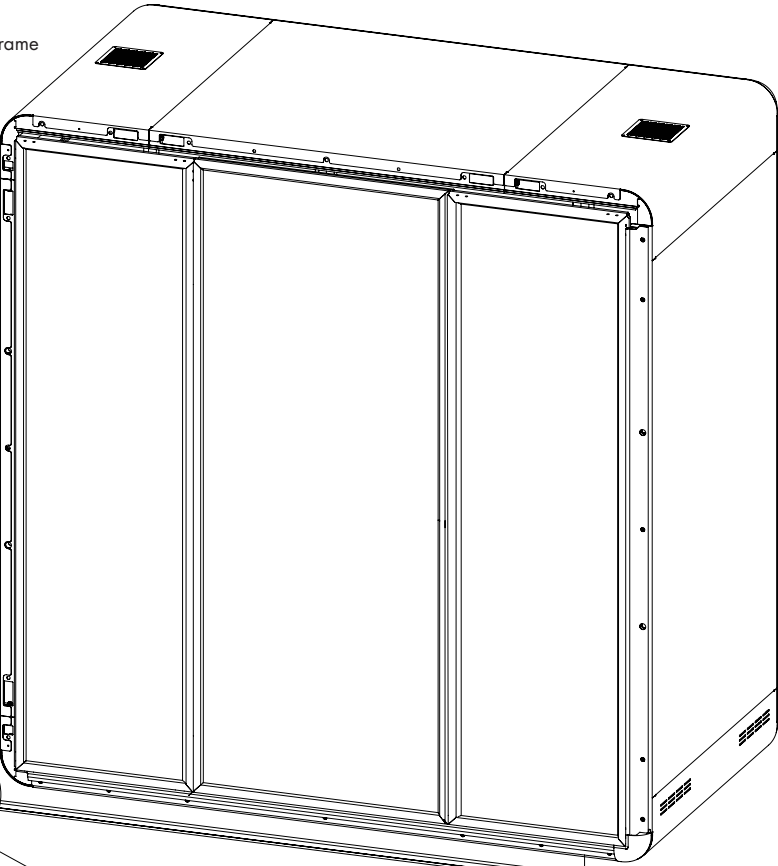


Step 10.

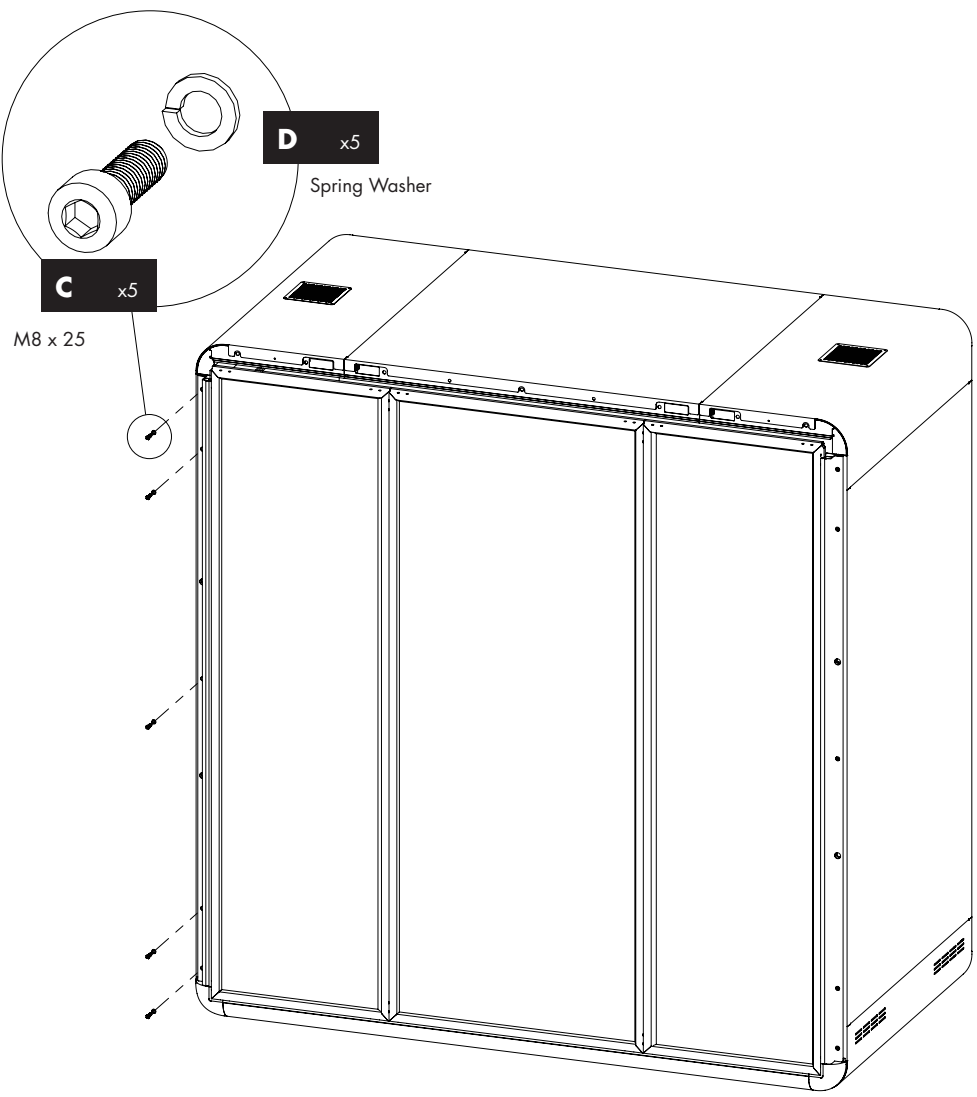


Step 11.

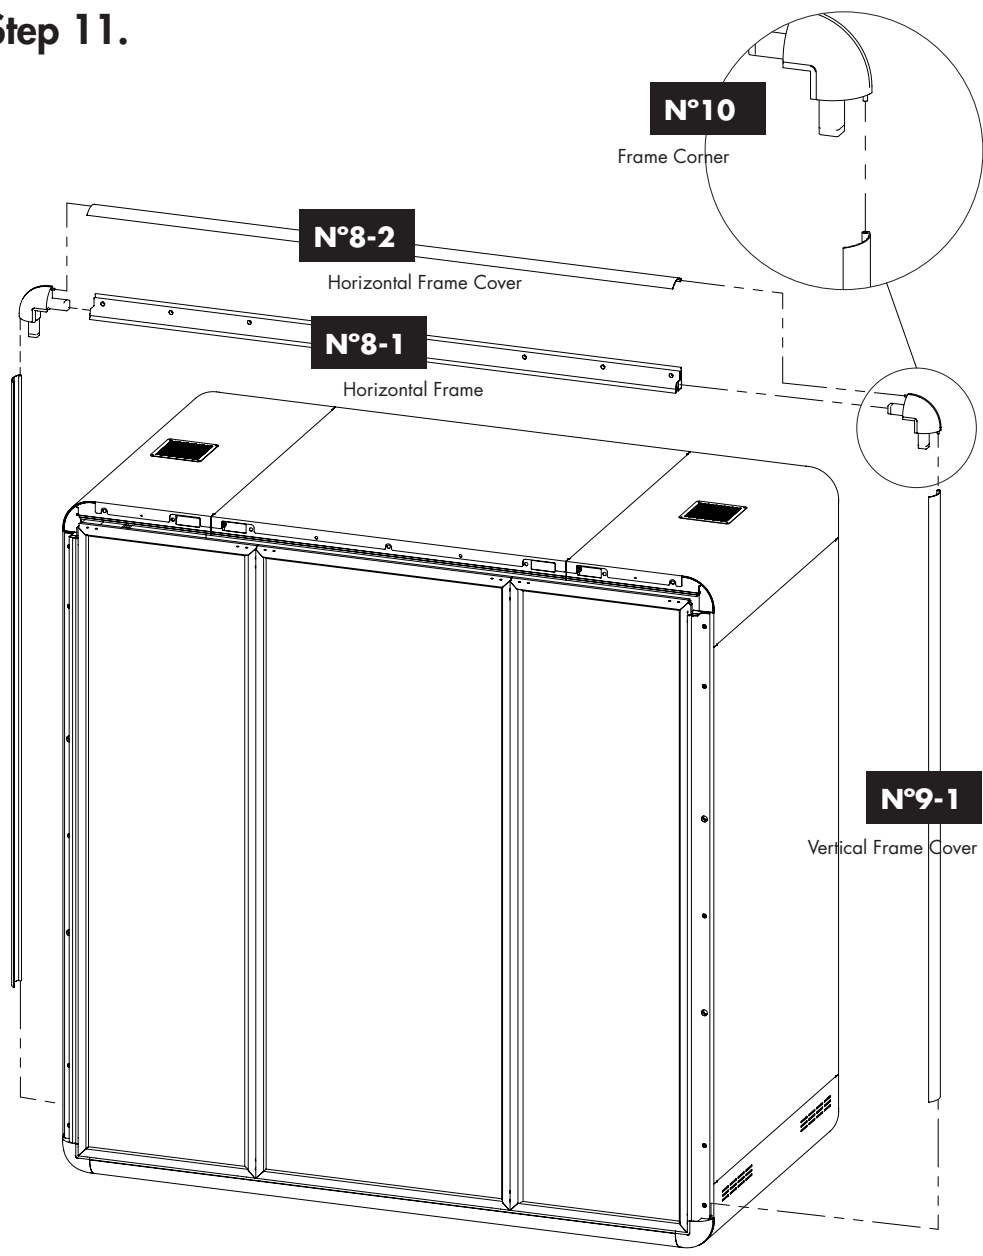


Step 12.

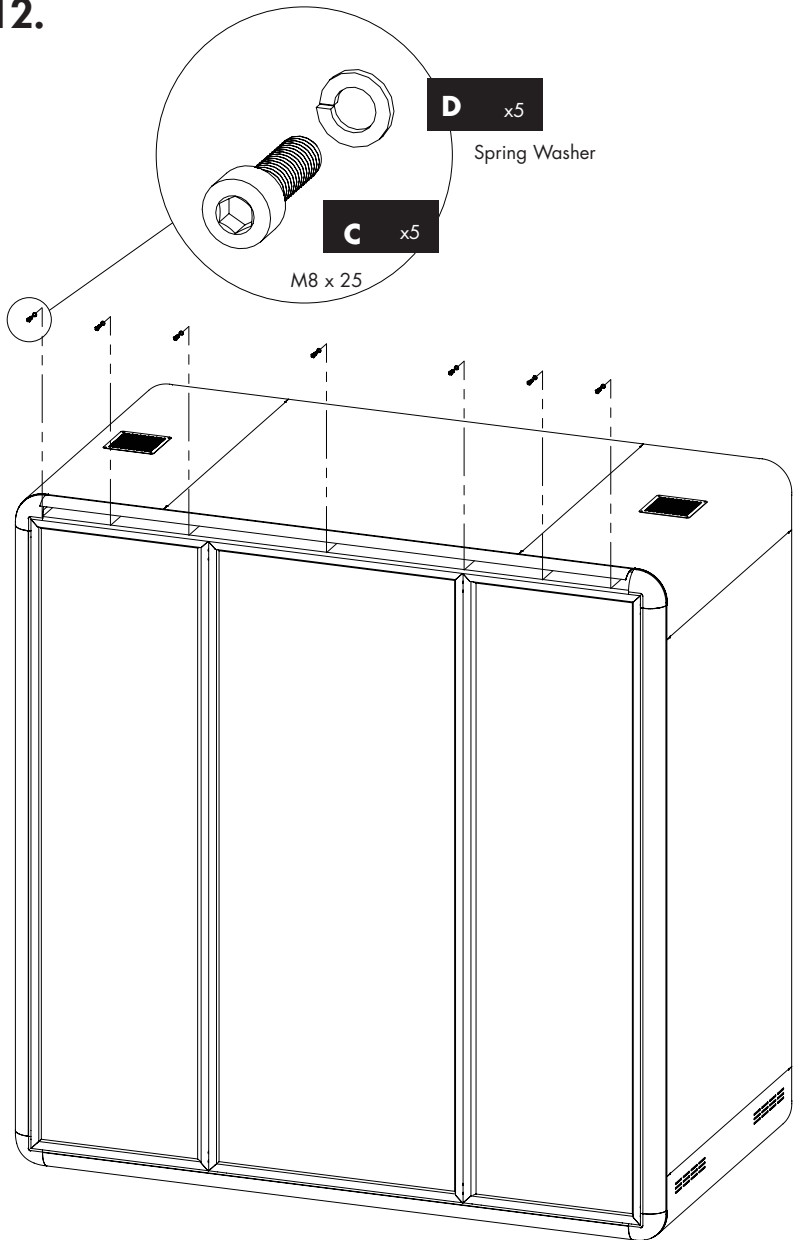


Step 13.

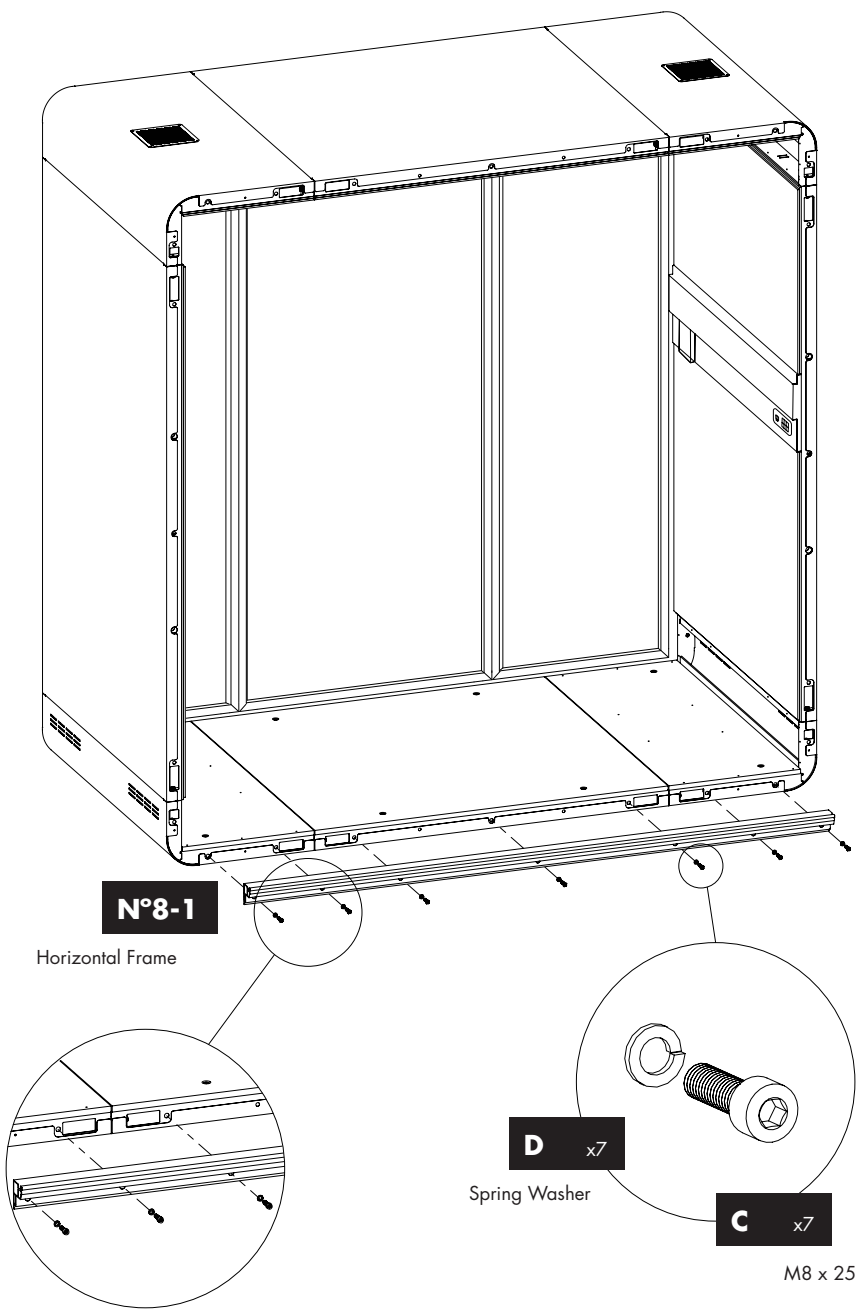


Step 14.

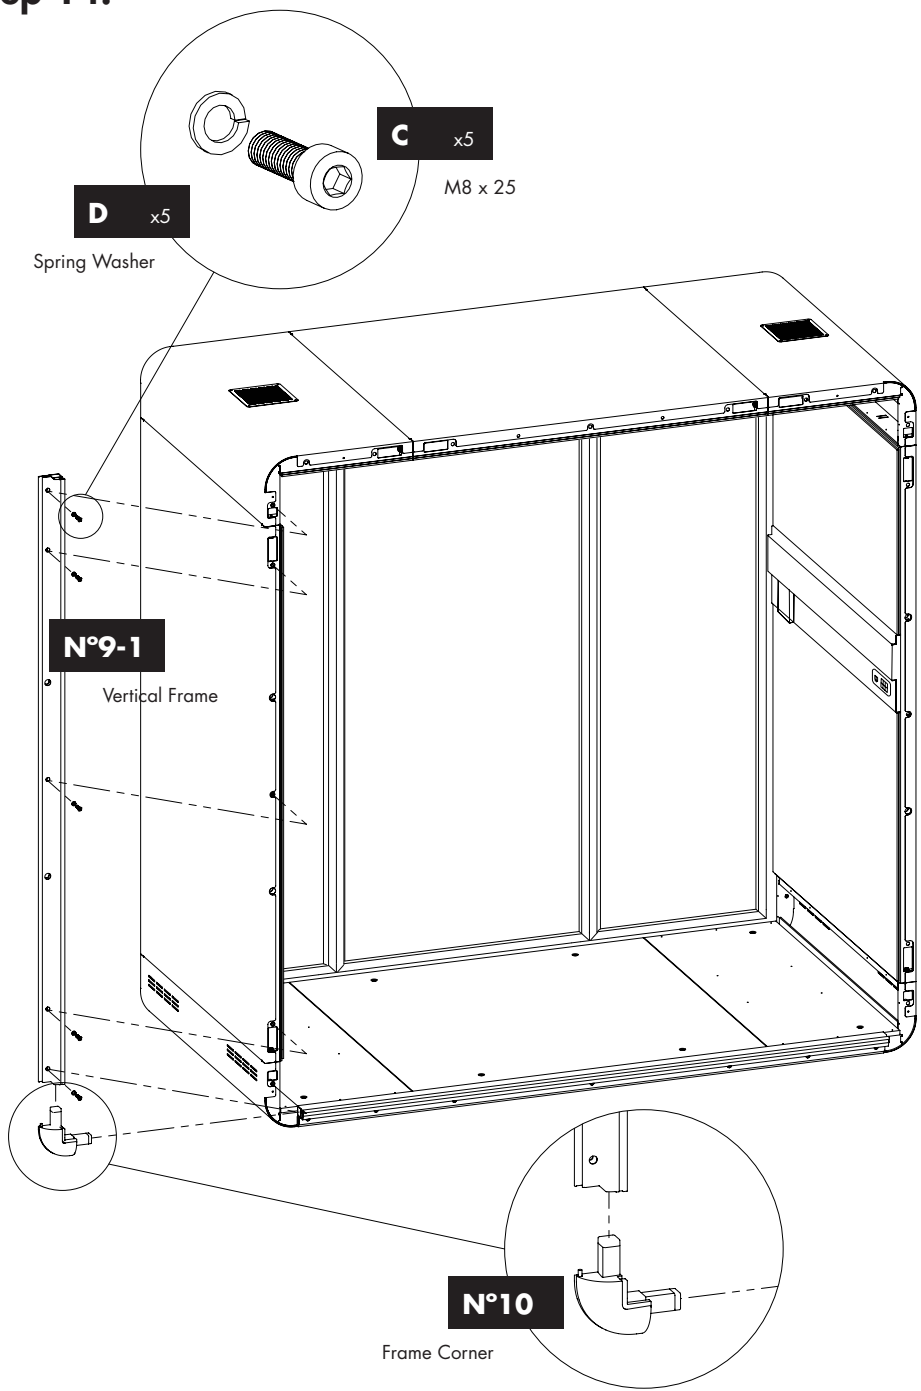

Step 15.

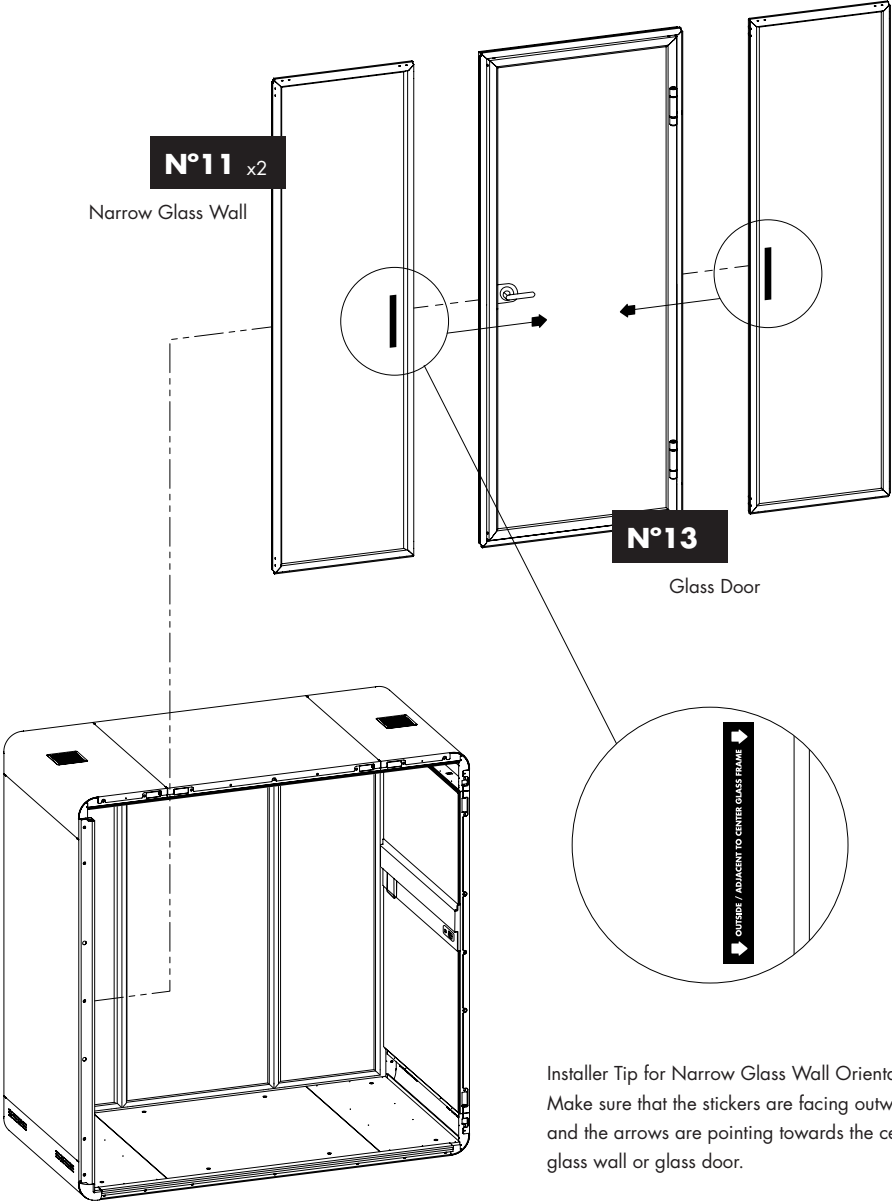


Step 16.

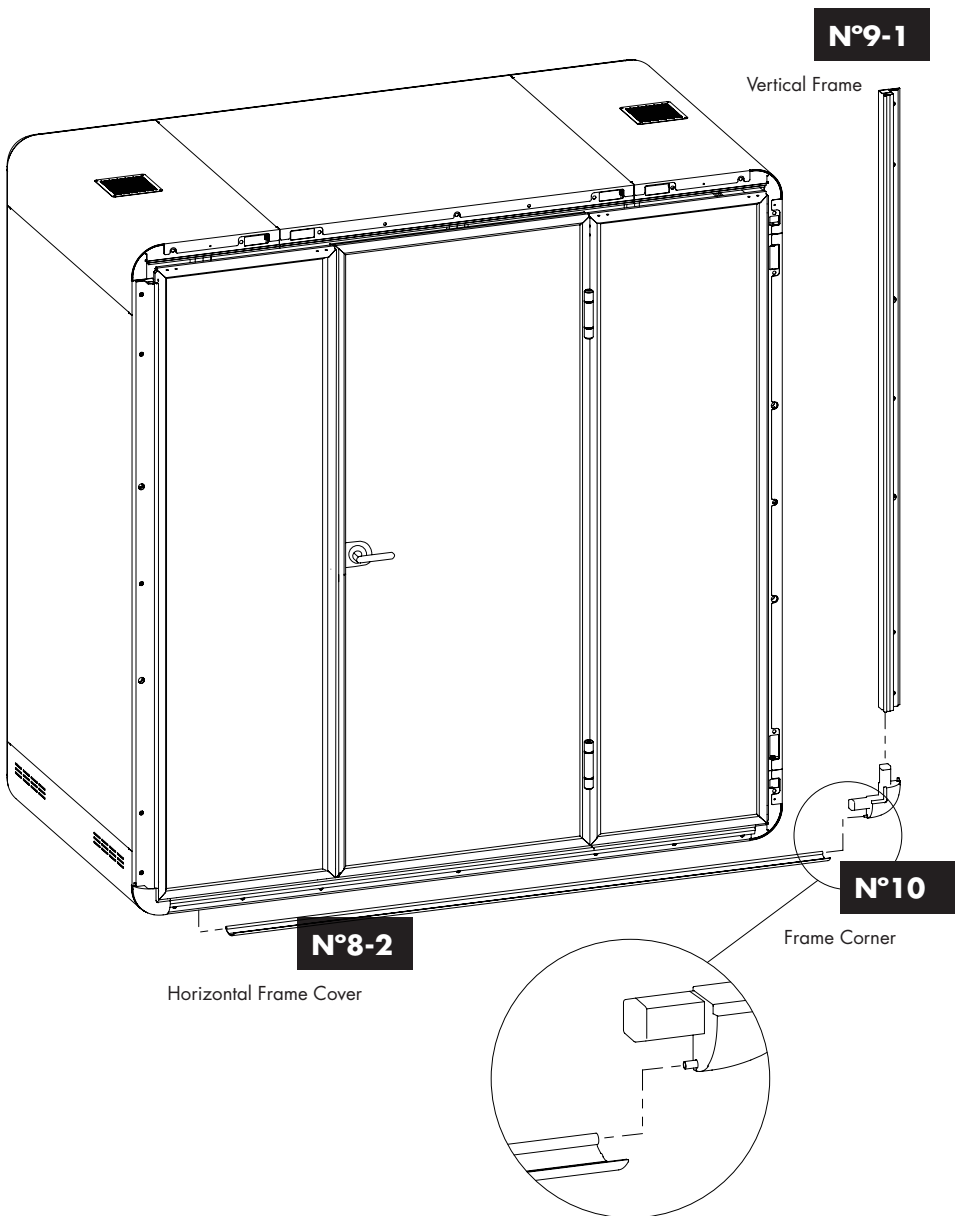





Step 17.

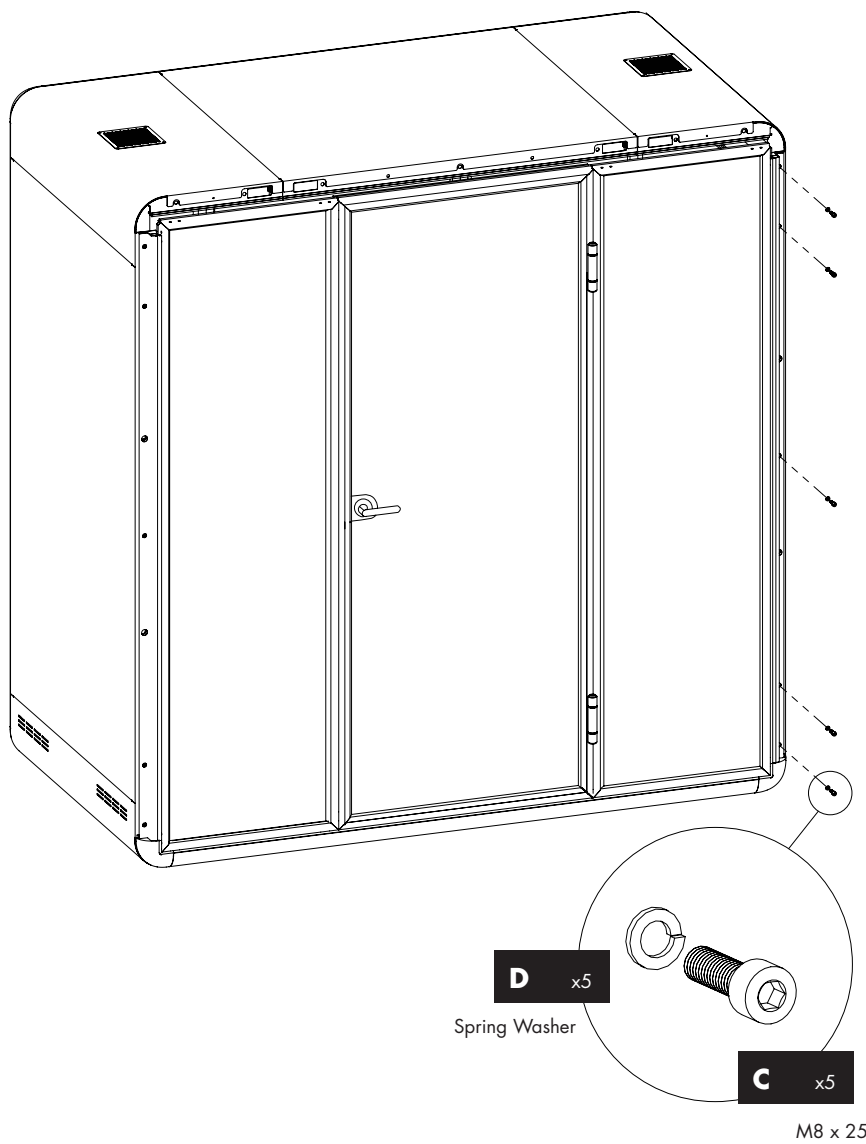


Step 18.

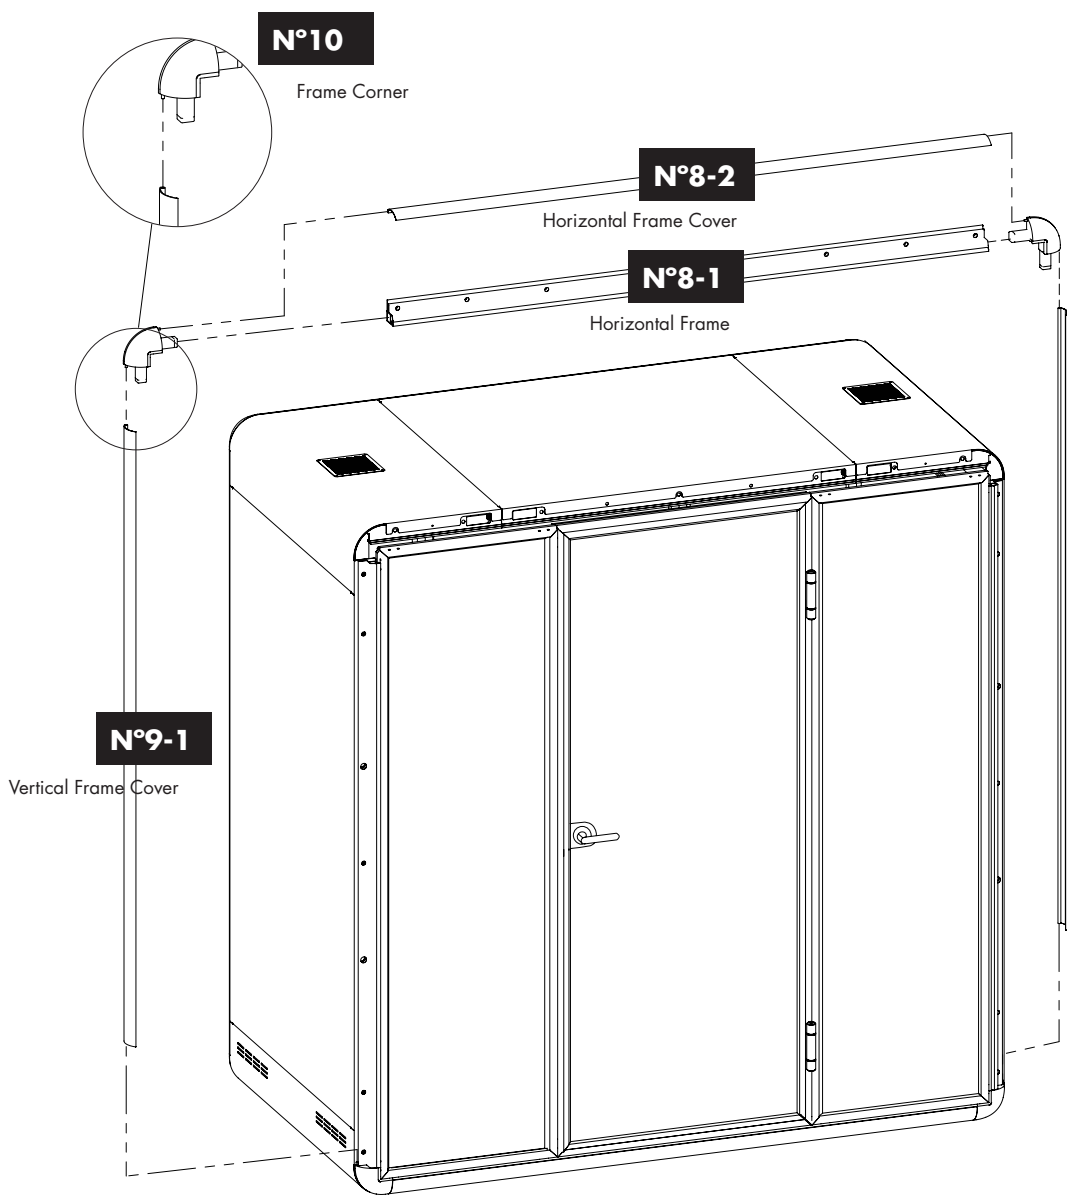


Step 19.

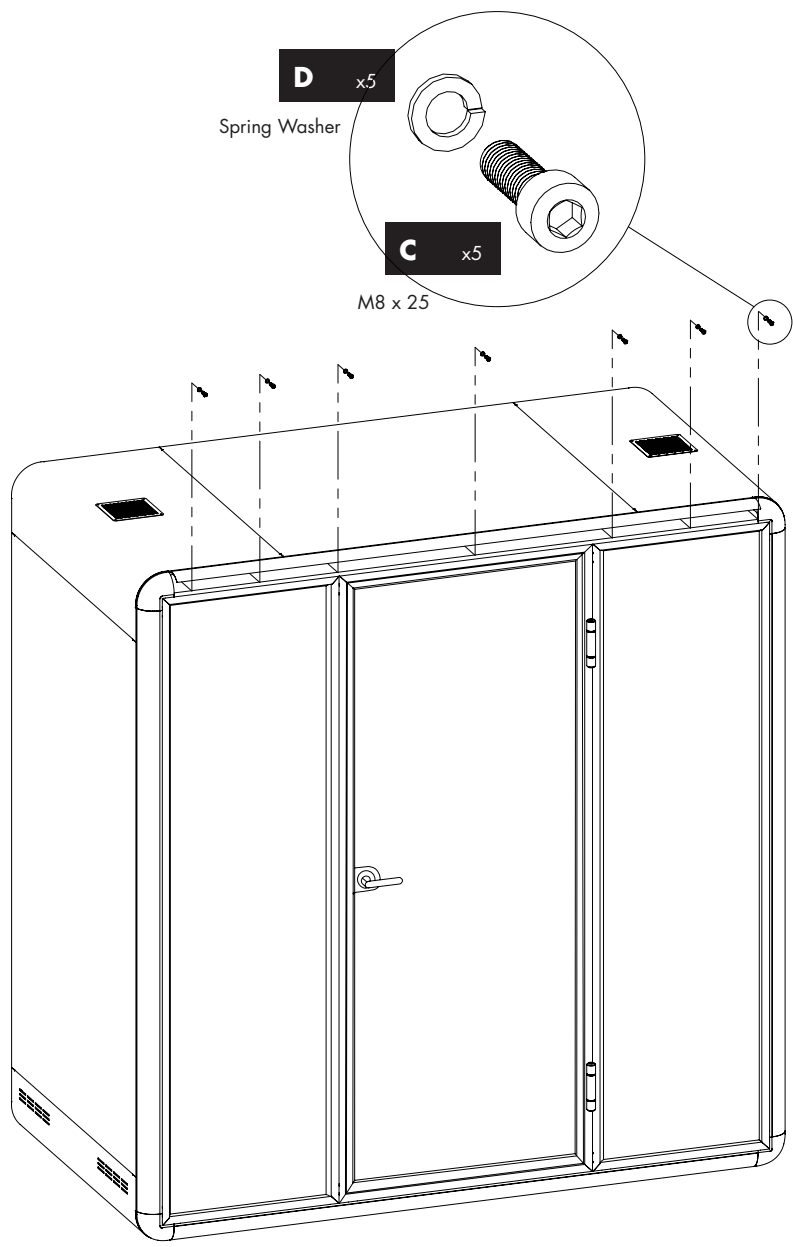


Step 20.

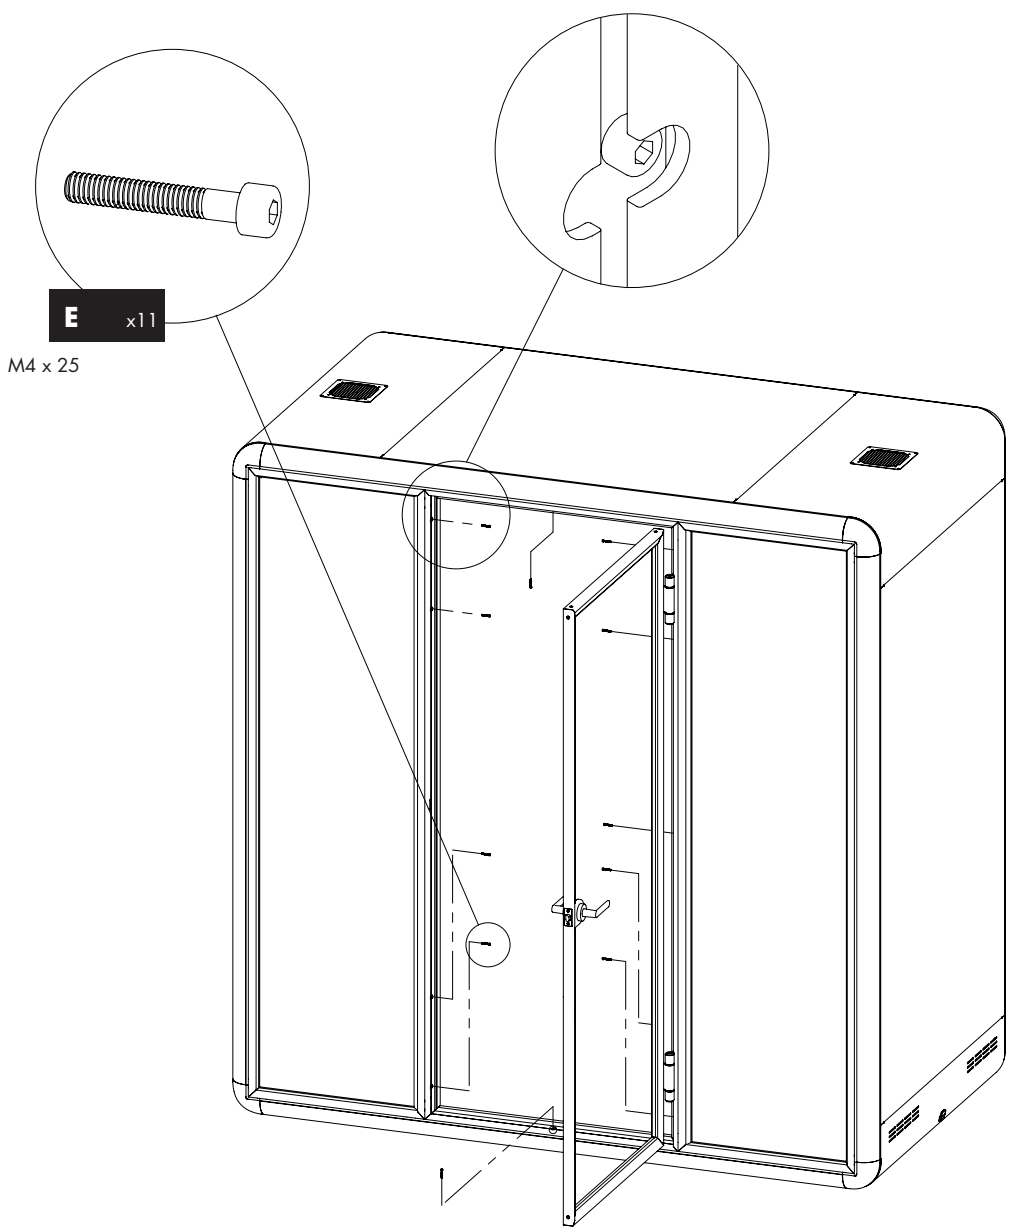

Step 21.

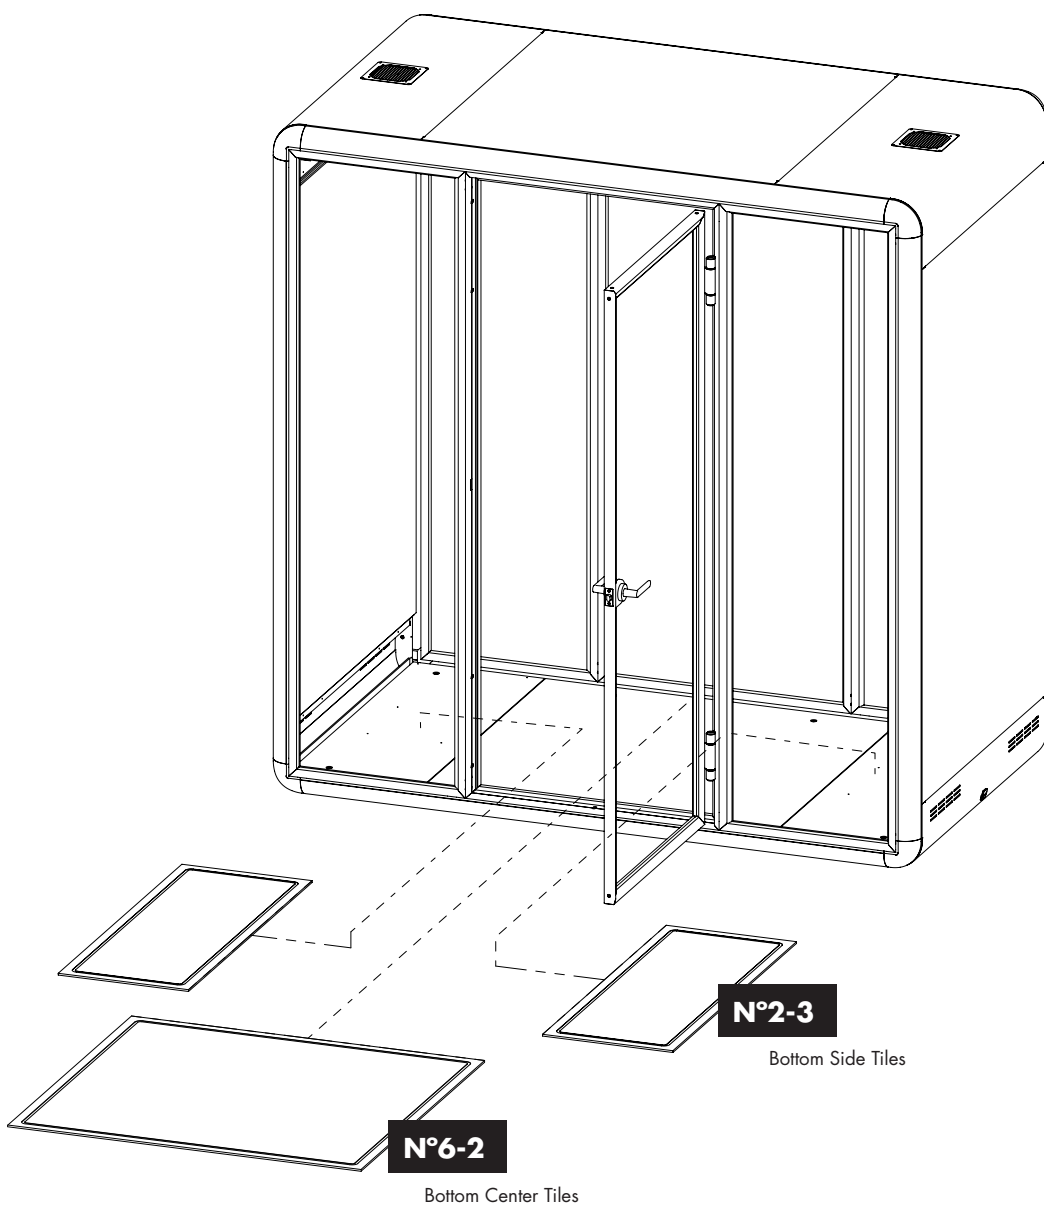

Step 22.

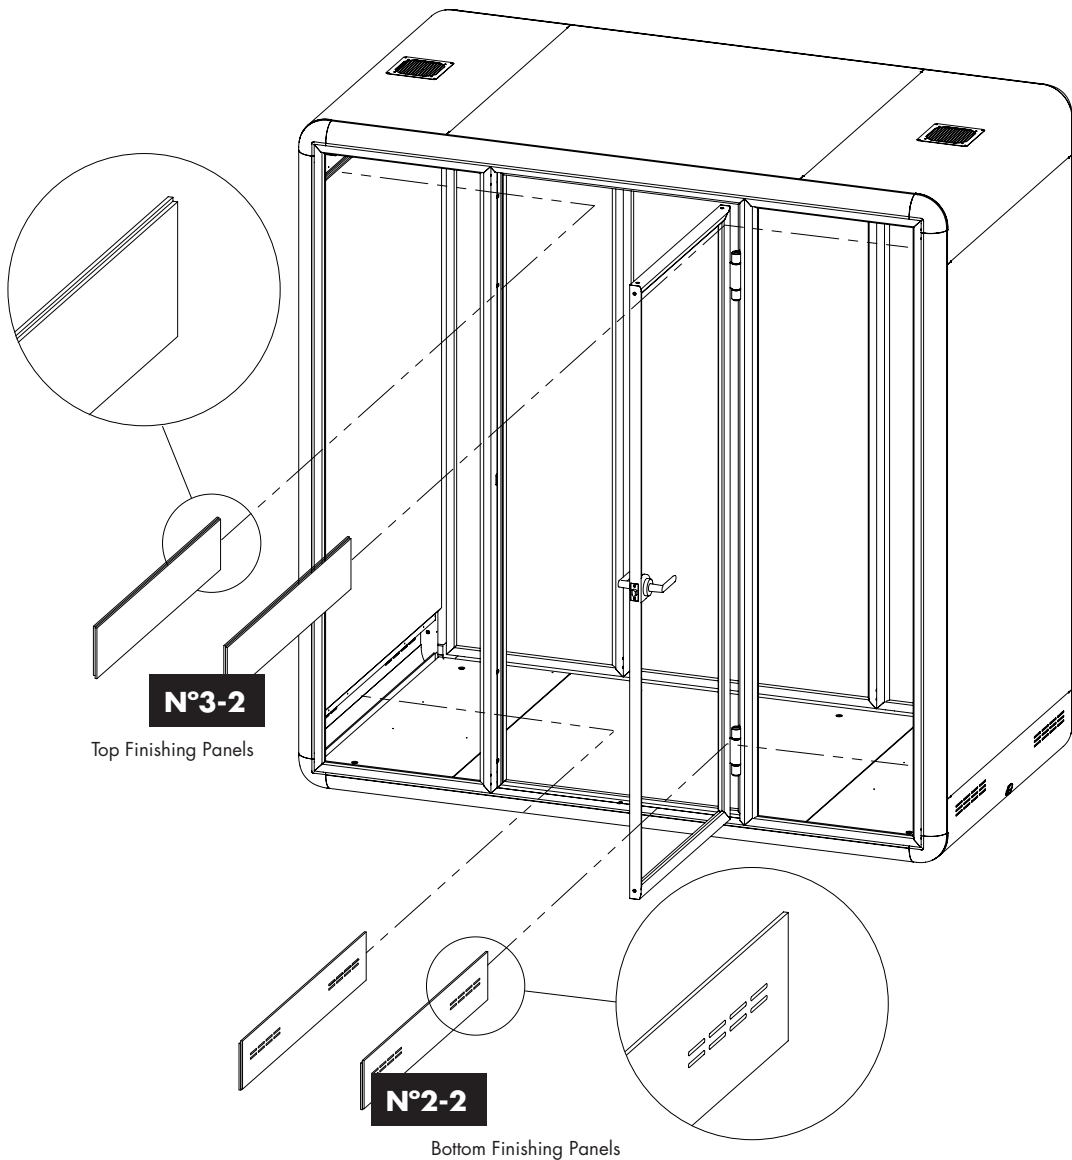

## Step 23.

Installer Tip for Cover Closure:  
Use a rubber mallet to close  
the aluminium frame cover.  
Make sure to start from one  
end and slowly work your way  
to the other end.

