


# KOLO SOLO

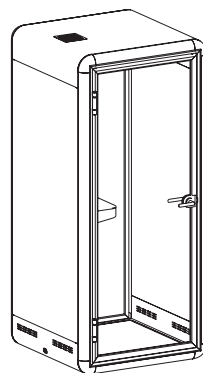

## Assembly Instructions.


---

acoustic collection - kolo solo  
[left hand open - outlet on left - without stool - type A/B]

koplus b.v. | [koplus.eu](http://koplus.eu)  
[info@koplusbrand.com](mailto:info@koplusbrand.com)

version 120919



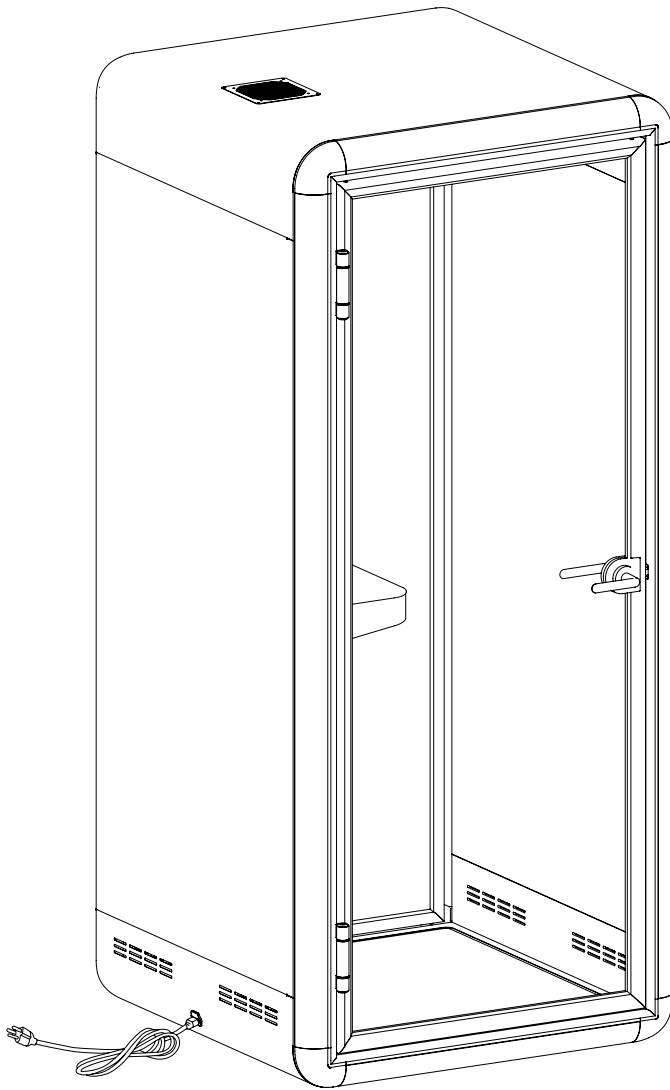

Left Hand  
Open Door

Outlet on Left  
Type A/B Plug

No Stool

Before we start, here are some things to be aware of:

1. This is the assembly instruction for right hand opening door with no stool.
2. A packaged **Solo** unit weights 315 kg and will require 2-3 persons to install. It takes an average of 30 - 45 min to install **Solo**.
3. Please assemble with caution and make sure that the installation site is protected to prevent any injuries or risks of damaging the product and surrounding.
4. Position and assemble **Solo** as close to its final placement as possible. If needed, a fully assembled **Solo** can be lifted and moved with a pallet jack. When moving the unit, please make sure to follow the moving instruction (pg. xx). DO NOT push the unit! You may risk tipping **Solo** or damaging its leveling feet.
5. Make sure you have all the required tools listed (pg. xx).
6. We recommend leaving atleast 30 cm of space between the wall or between multiple units of **Solo**.
7. Make sure that the **Solo** power source can safely load 10amp. When the ventilation is on, LED light is at its full lumination, and the power charging station is not in use, the wattage usage is 22W. The power cord fuse is set at 7amp to prevent overloading.
8. **Solo** comes with 2 AC power outlest and 2 charging outlets. DO NOT plug in any electronic devices that uses over 5amp.

# Required Tools



Drill

**\*\*Please confirm the adaptor specification with a Koplus sale ahead of time\*\***




90 Degree Drill Adaptor



Rubber Mallet



Ratchet Wrench - Metric Socket



Phillips Screw Driver















Allen Key Set

**\*\*Must be purchased seperately\*\***




Aligning Rods

Part List

<div>N°1-1</div> <div></div> <div>Tool Kit: Screw Packx1</div>	<div>N°1-2</div> <div></div> <div>Tool Kit: Power Cordx1</div>	<div>N°2-1</div> <div></div> <div>Bottomx1</div>
<div>N°2-2</div> <div></div> <div>Bottom Finishing Panelx2</div>	<div>N°2-3</div> <div></div> <div>Floor Tilex1</div>	<div>N°3</div> <div></div> <div>Side Wall + Electricx1</div>
<div>N°4</div> <div></div> <div>Side Wallx1</div>	<div>N°5-1</div> <div></div> <div>Topx1</div>	<div>N°5-2</div> <div></div> <div>Top Finishing Panelx2</div>
<div>N°6</div> <div></div> <div>Back Glass Framex1</div>	<div>N°7-1</div> <div></div> <div>Table Top + Framex1</div>	<div>N°7-2</div> <div></div> <div>Table Bottom Coverx1</div>







**N°8**



Glass Door Frame


x1

# Tool Kit: Screw Pack List


<div>A</div> <div></div> <div>M8 x 35x8</div>	<div>B</div> <div></div> <div>M8 x 50x8</div>	<div>C</div> <div></div> <div>M8 x 25x36</div>
<div>D</div> <div></div> <div>Spring Washerx36</div>	<div>E</div> <div></div> <div>1/4-20 UNC x 1-1/2x4</div>	<div>F</div> <div></div> <div>M4 x 12x4</div>




Step 1.

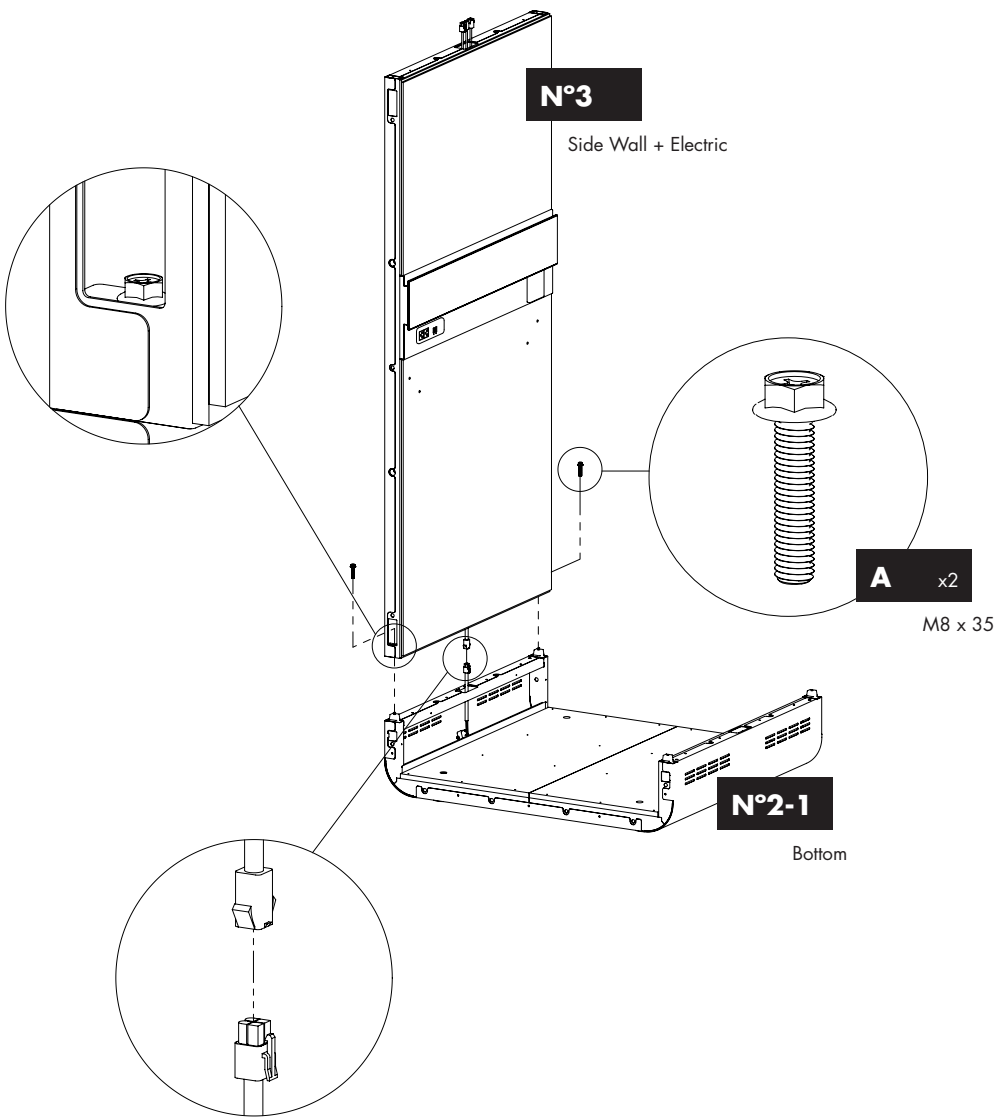


Step 2.

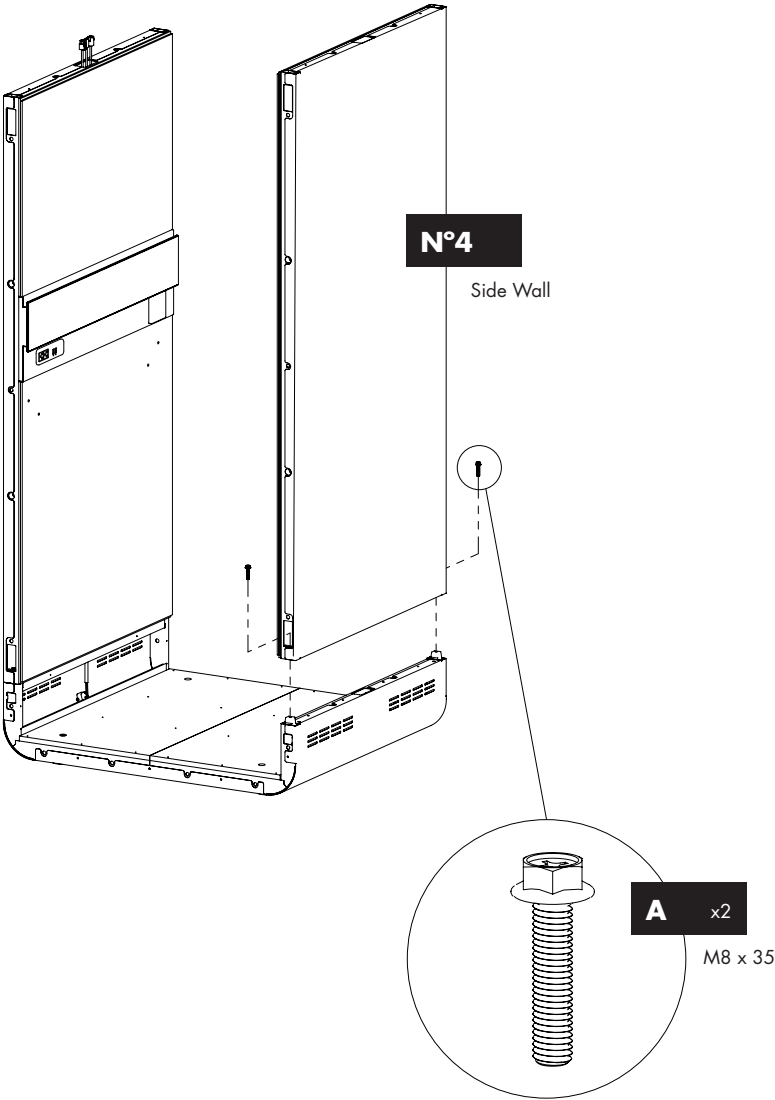


## Step 3.

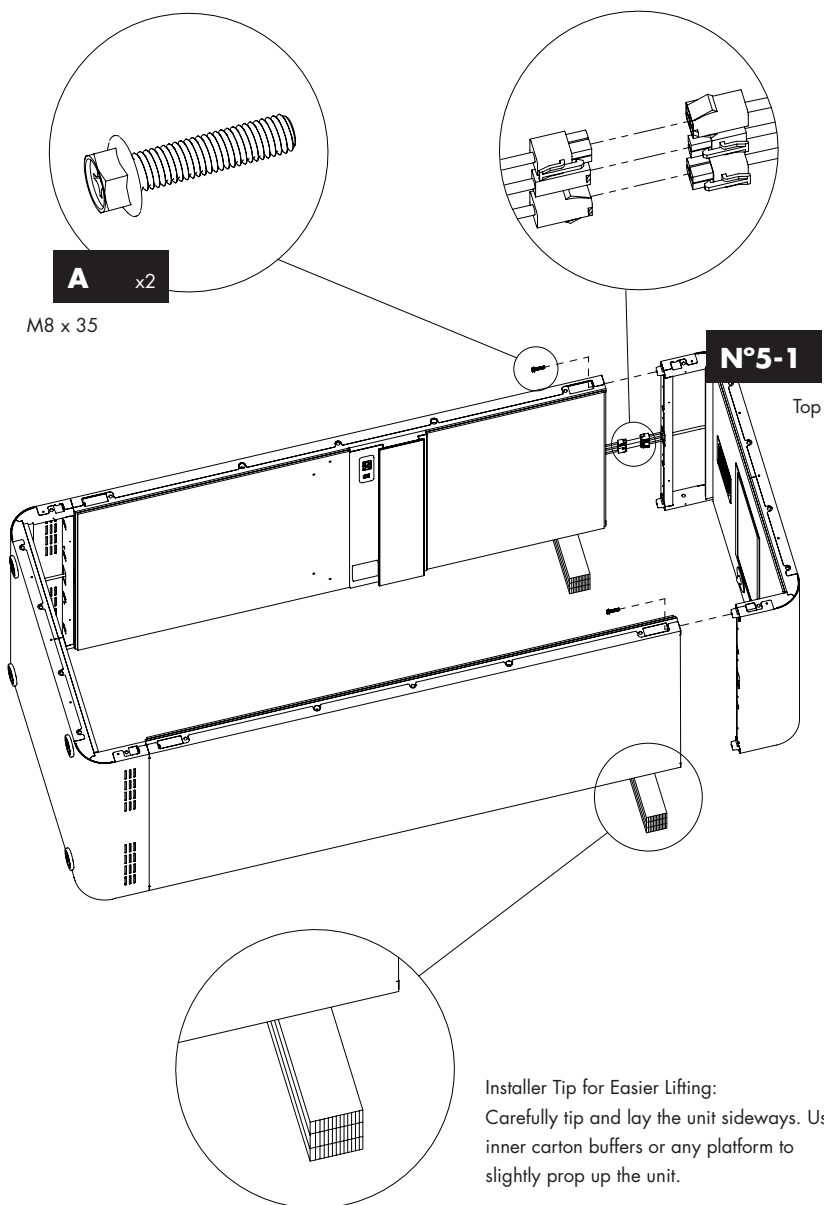


Step 4.

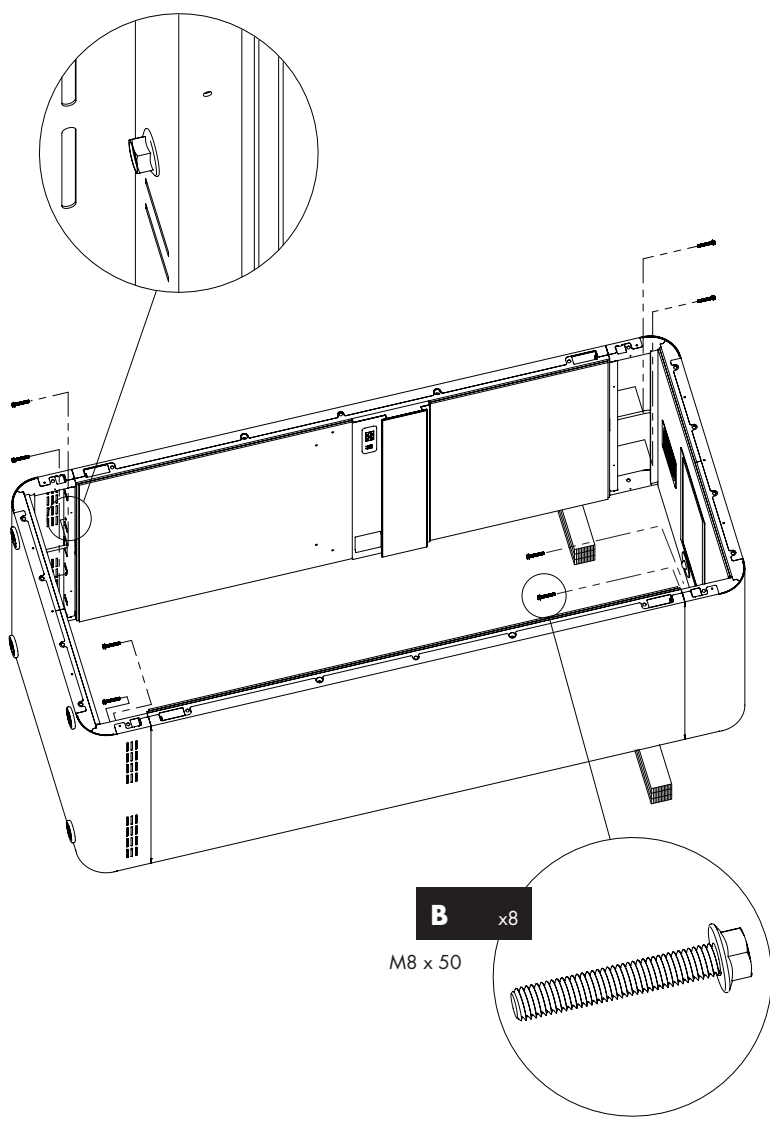

Step 5.

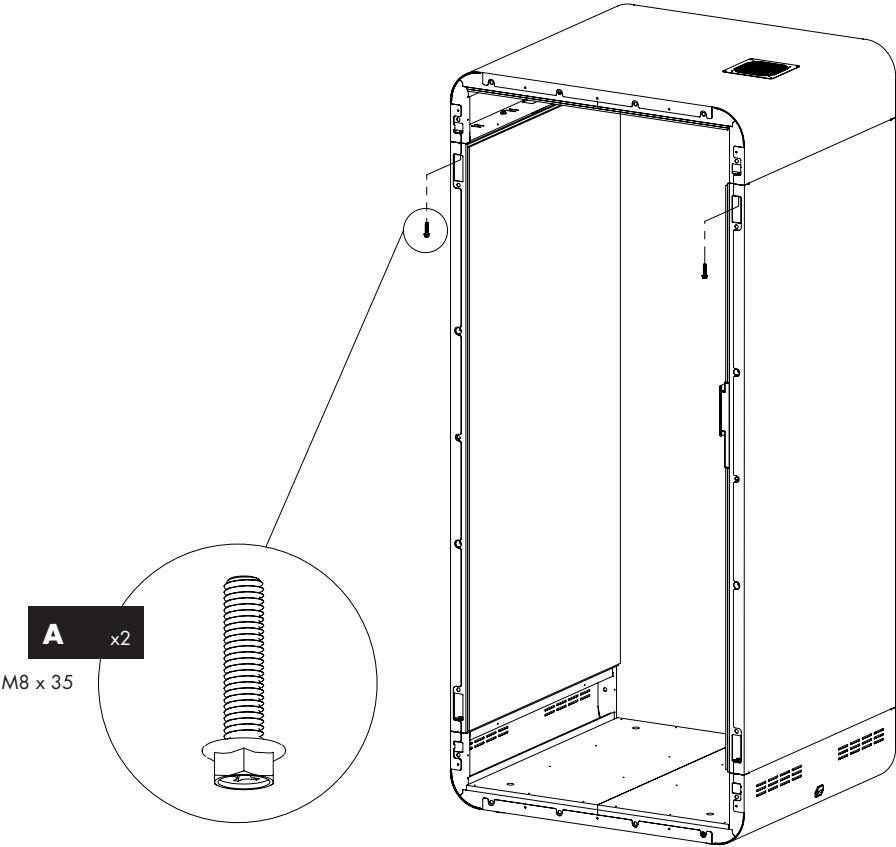

## Step 6.

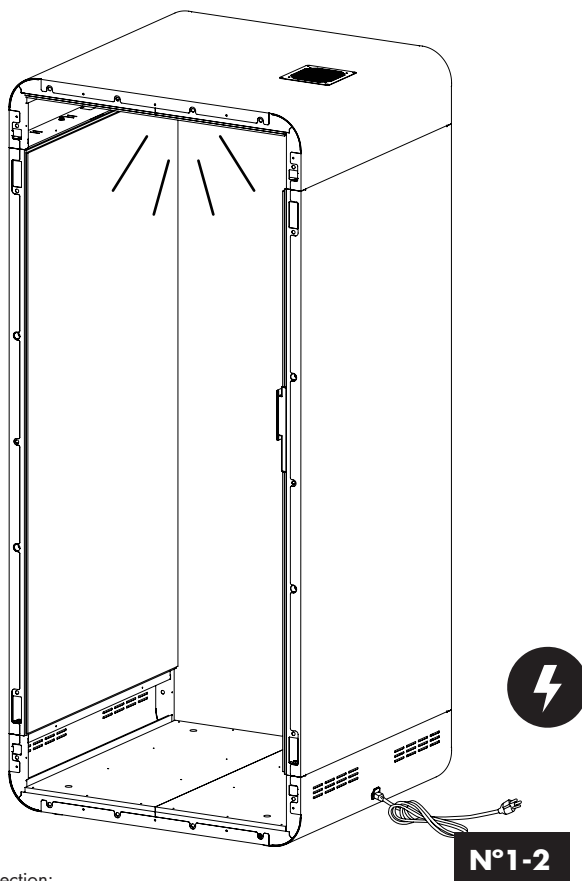


Installer Tip for Power Connection:

Plug in the unit and check if all electronic devices turn on normally. If not, check if all power cords are properly connected before proceeding.


Tool Kit: Power Cord

## Step 7.

Installer Tip for Alignment & Lifting:  
Use our customised alignment rods to  
lift and fix glass frame in place before  
securing with screws.

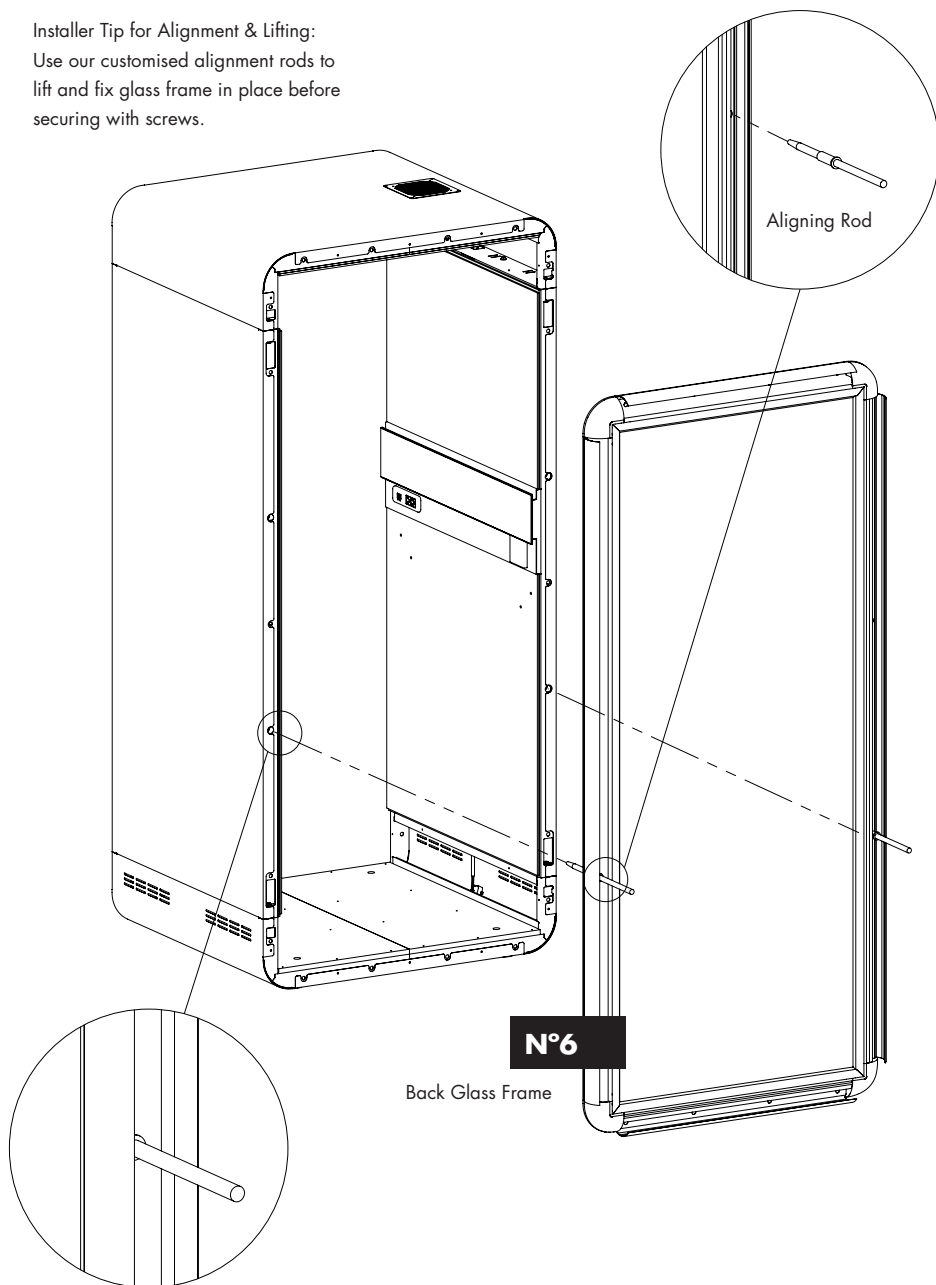


Step 8.

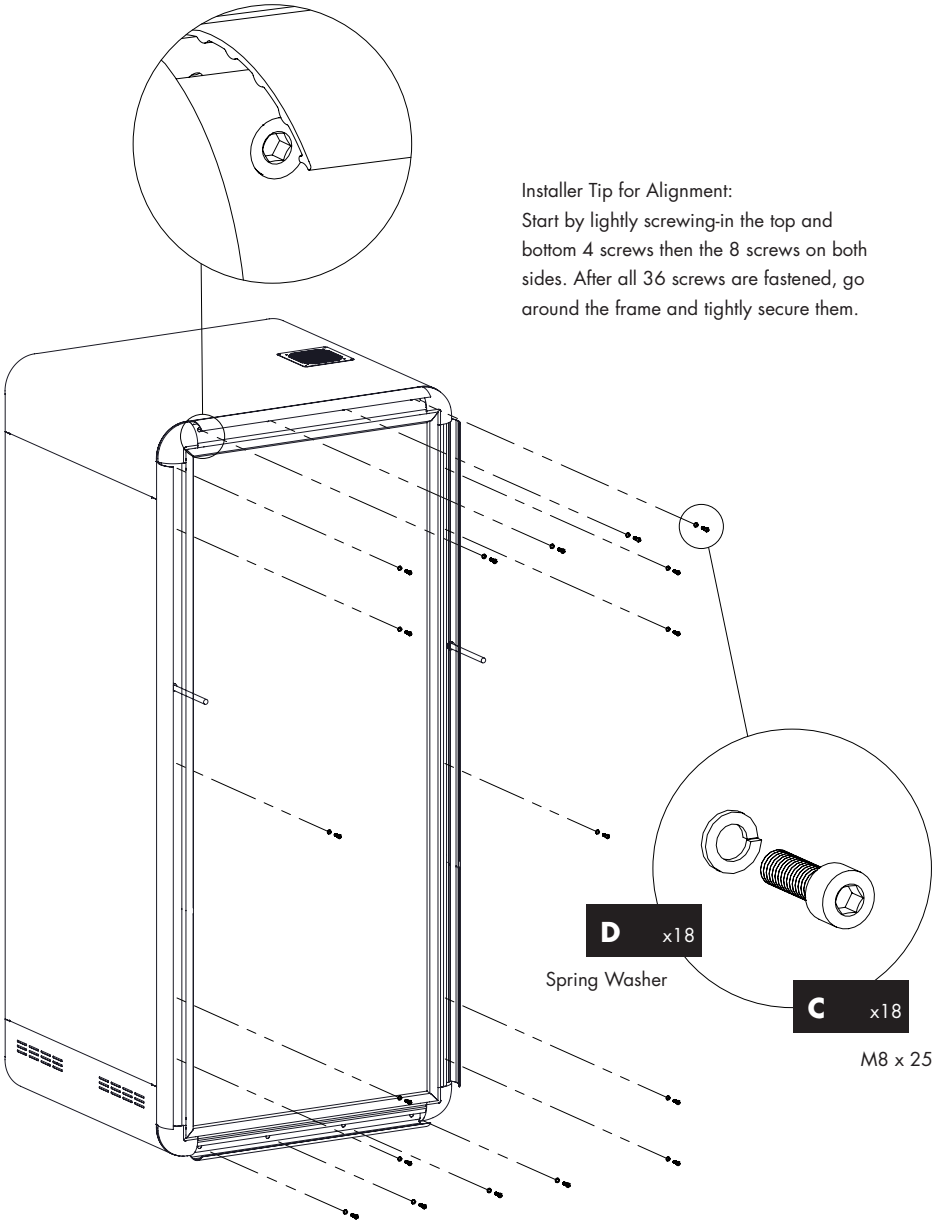




# Step 9.

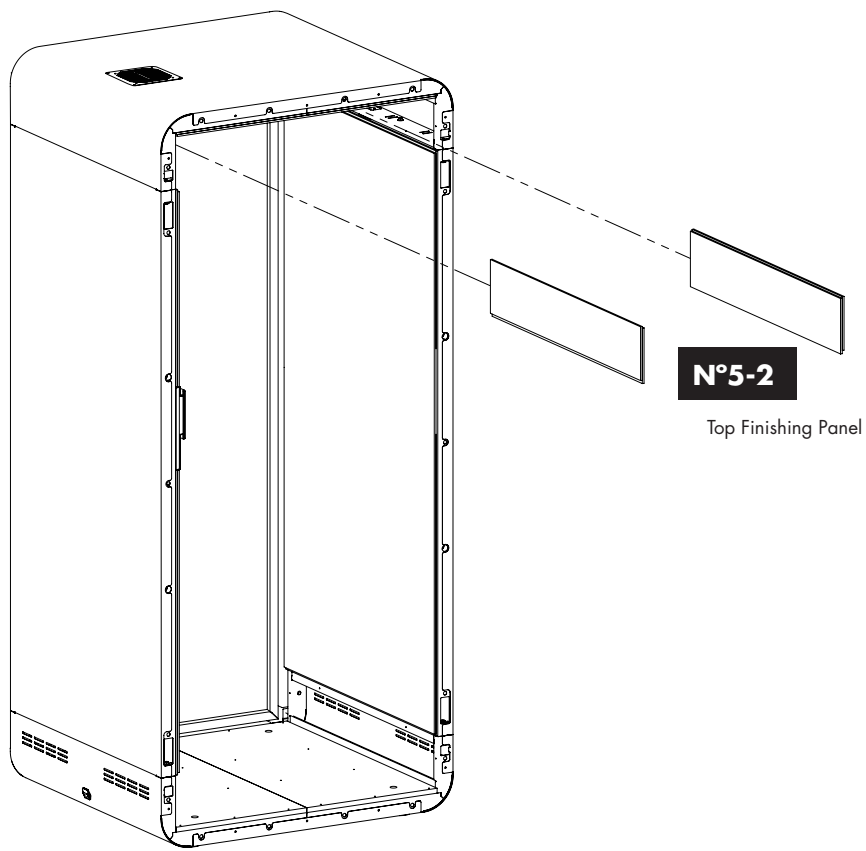


## Step 10.

Installer Tip for Table Installation:


You'll find four cross openings underneath the controll panel. They act as guide to help locate the screw inserts.

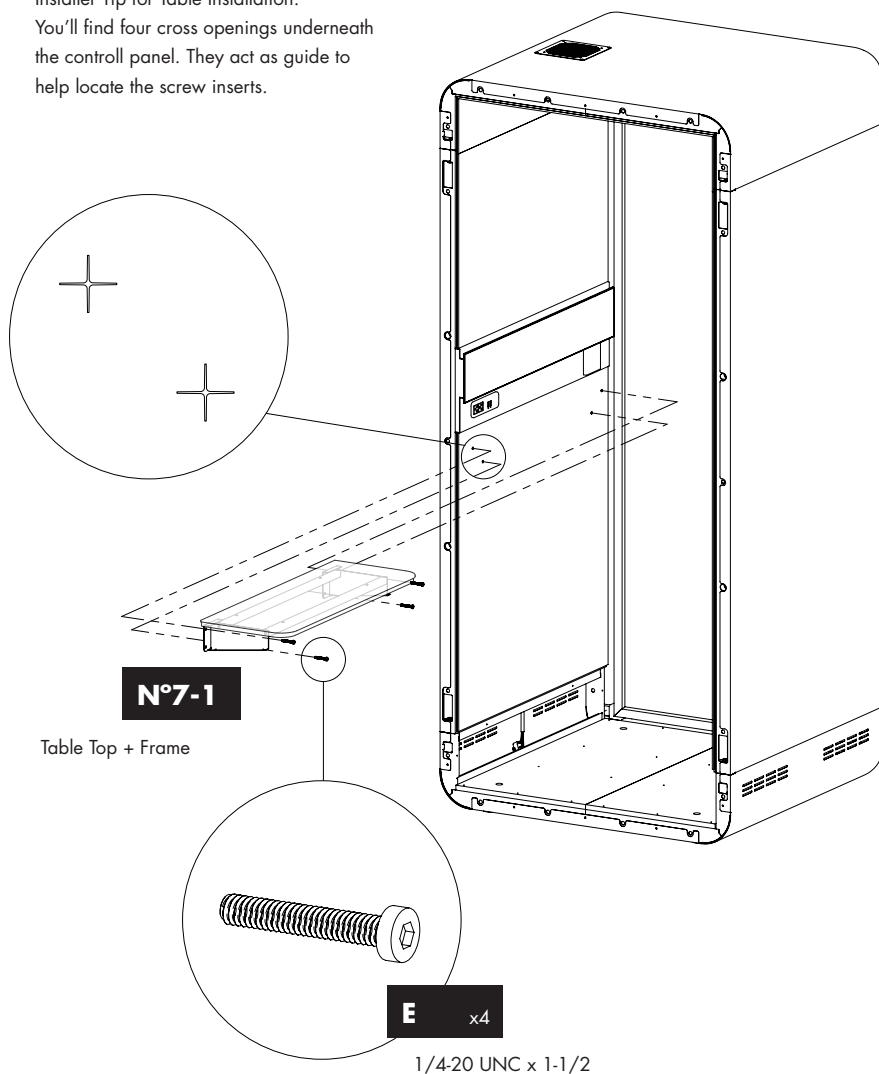

Step 11.

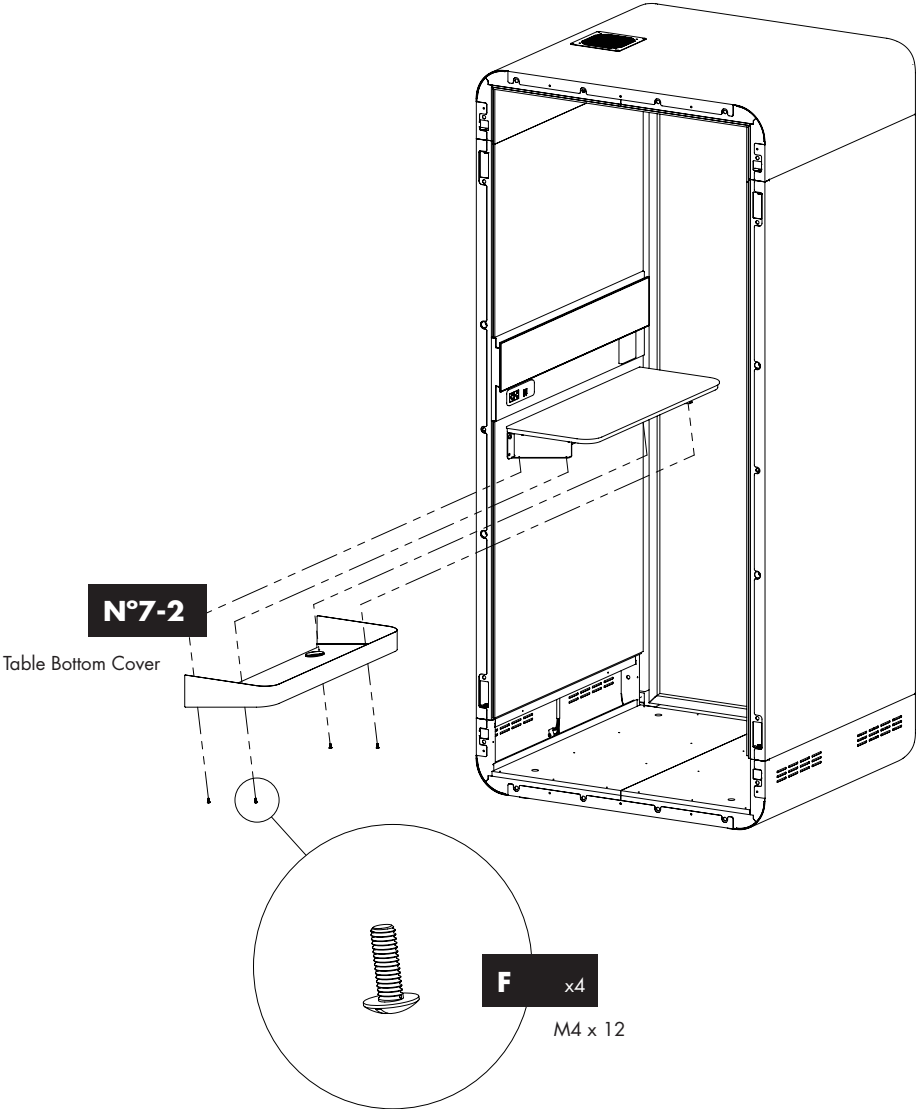


Step 12.

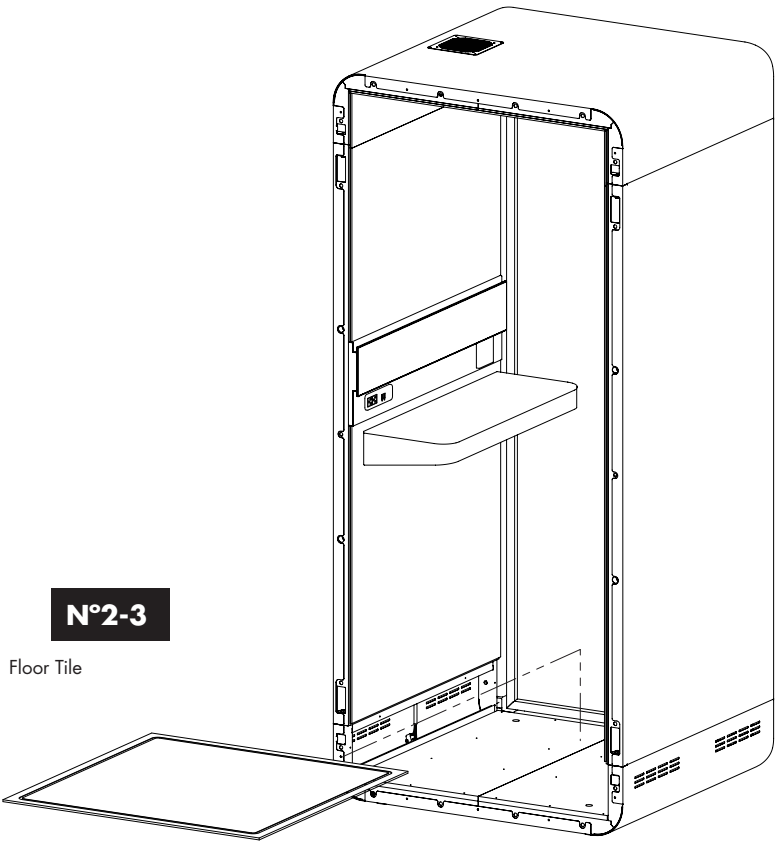

**N°2-3**

Floor Tile

Step 13.

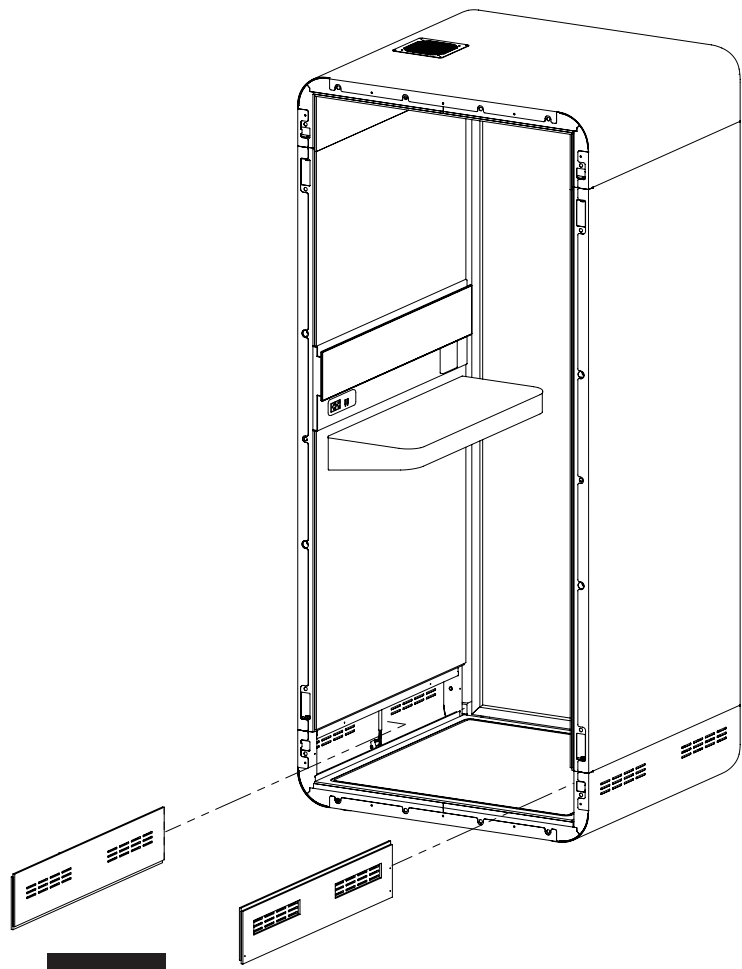


**N°2-2**

Bottom Finishing Panel

# Step 14.


Installer Tip for Alignment & Lifting:  
Use our customised alignment rods to  
lift and fix glass frame in place before  
securing with screws.

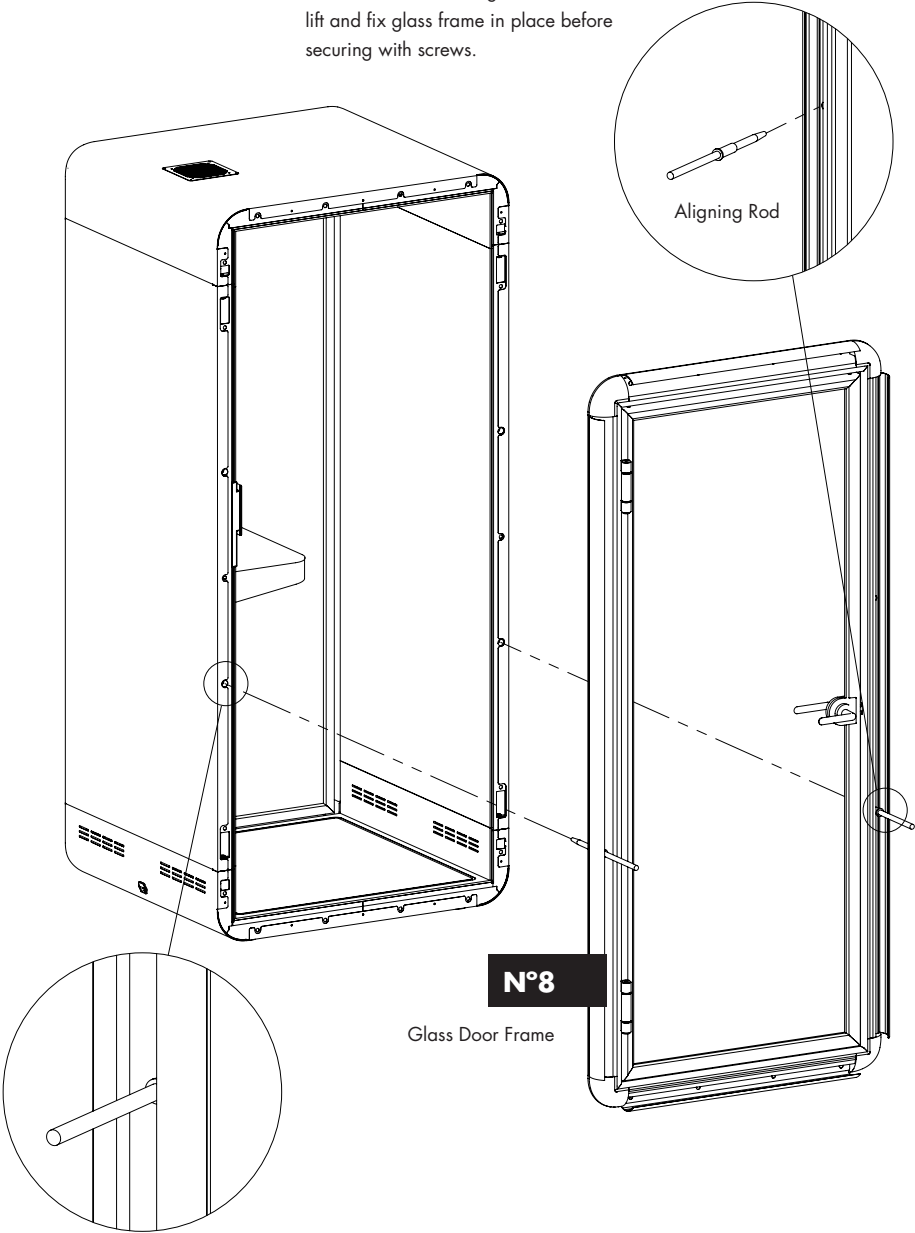


## Step 15.

Installer Tip for Alignment:

Start by lightly screwing-in the top and bottom 4 screws then the 8 screws on both sides. After all 36 screws are fastened, go around the frame and tightly secure them.

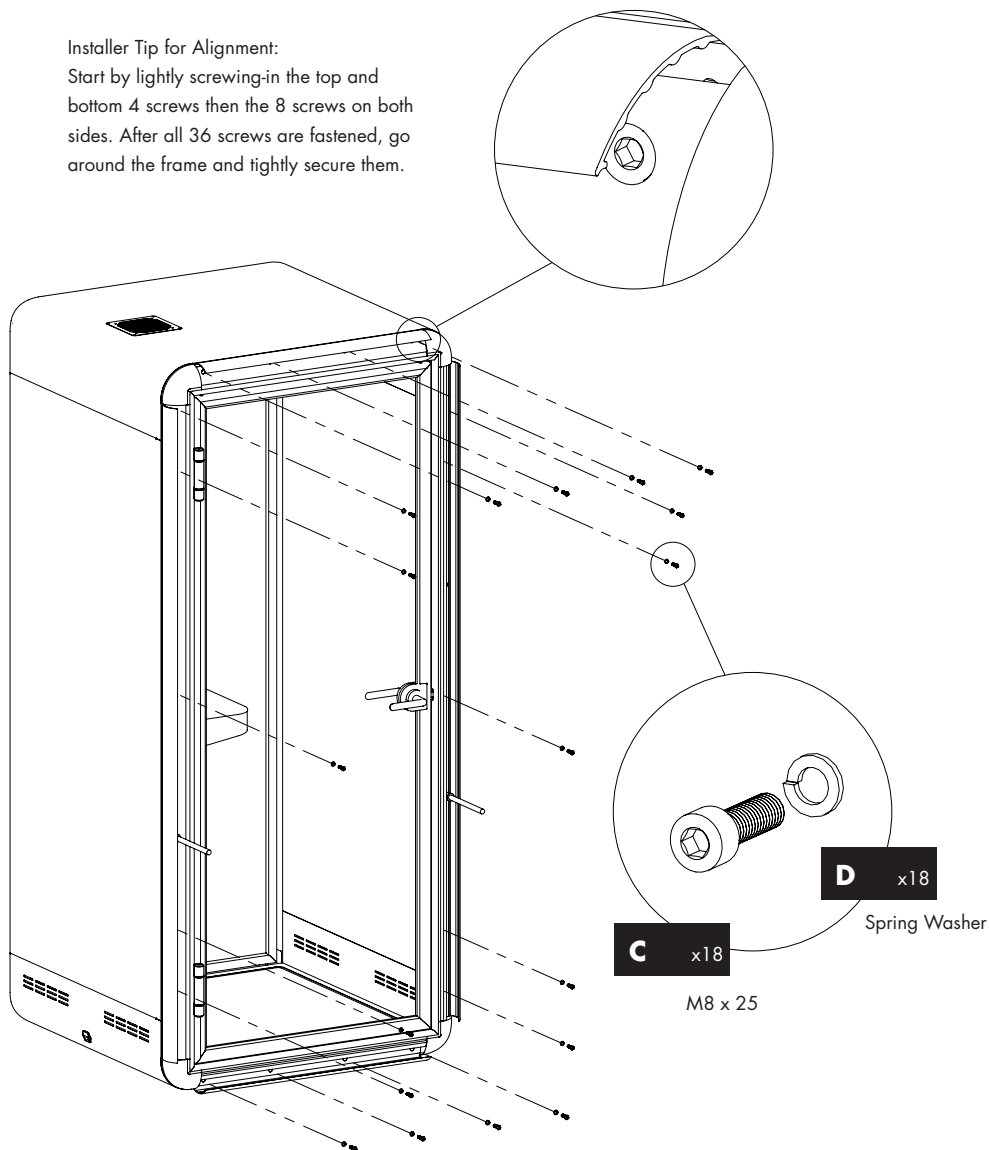

## Step 16.

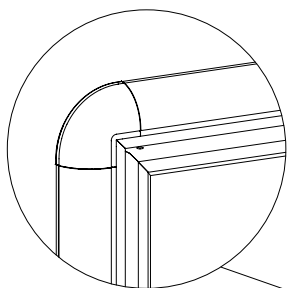

Installer Tip for Cover Closure:  
Use a rubber mallet to close  
the aluminium frame cover.  
Make sure to start from one  
end and slowly work your way  
to the other end.



**N°1-2**

Tool Kit: Power Cord

